MULTIMEDIA
MANUAL

PROTON
INSPIRING CONNECTIONS

ALL-NEW
SAGA
INTELLIGENCE
THAT THRILLS

Foreword

Dear users

Thank you very much for using our product. Before your first use, please read this manual carefully to help you understand the proper operation methods of this product for safe use and better entertainment experience!

Please read this manual in detail before you start operating this multimedia and navigation device. Perusahaan Otomobil Nasional Sdn. Bhd. reserves the right of final interpretation of this manual.

Important safety considerations:

1. The drivers are prohibited from watching programs and operating the device while driving to avoid traffic violations and accidents.
2. Do not disassemble or repair the device without permission to avoid damaging the device and accidents.
3. Since the product is subject to upgrade, this manual may have discrepancies from the actual operations. Please operate as per the actual conditions.
4. The operating voltage of this product is 9V ~ 16V. The product will restart for self protection when the battery voltage is low.

Note : Multimedia function may differ based on country.

If you have any questions, kindly contact or visit our website as mentioned to locate the nearest dealer and other available services.

www.proton.com (1-800-888-398)

PROTON EDAR SDN. BHD.
Centre of Excellence Complex
Km33.8 Westbound Shah Alam Expressway
47600 Subang Jaya , Selangor Darul Ehsan , Malaysia.
1-300-88-8877

© 2026 Perusahaan Otomobil Nasional Sdn. Bhd.
All Right Reserved

Feb 2026

Note: The cover and pictures in this Manual are only for reference, which shall be subject to the actual vehicle.

Perusahaan Otomobil Nasional Sdn Bhd (PROTON) reserves the right to make changes to the design and specifications and/or to make additions or improvements to the vehicle without any obligation to install the same on vehicles previously manufactured. The driver is required to strictly comply with all laws and regulations governing the use of this vehicle.

This Manual has been written in compliance with such laws and regulations currently in force. PROTON reserves the right to make such amendments and/or revisions to this Manual as and when required. This Manual is a copyright owned by PROTON. This Manual or any part thereof shall not be reproduced, stored in any retrieval system, or transmitted in any form or by any means without the prior written permission of Perusahaan Otomobil Nasional Sdn. Bhd (PROTON).

All the data contained in the manual are the latest data at the time this manual is published. In the event of any conflict or discrepancy between the provisions of the English language version of this Manual and Manuals of any other language provided, the provisions of the English language manual shall prevail for the purpose of interpretation and applicability.

Contents

Note to Users

3 Operation Instructions
- 3 Note to Users
- 4 Safety Information
- 4 Graphical Information
- 4 Disclaimers
- 5 Notes Before Using Bluetooth

Multimedia System (Type 1)

7 Multimedia Unit (Type 1)
- 7 Overview of Multimedia Unit (Type 1)

8 Device and Operation
- 8 Steering Wheel Control Buttons
- 10 Touchscreen Operation
- 11 System Start-up
- 13 Screensaver (Lock Screen)
- 14 Homepage (Home Screen)

15 Vehicle Setting
- 15 Vehicle
- 16 Display
- 17 Sound
- 21 Connection
- 22 ADAS*

23 Multimedia Entertainment
- 23 Media App
- 25 Radio
- 27 USB Music and Bluetooth Music

29 Phone
- 29 Bluetooth Phone Function
- 31 Dialing
- 32 Answering and Hanging Up

34 Gallery
- 34 Photo and Video

37 Andriod Auto Apple Carplay*
- 37 Description of AACP
- 38 Apple CarPlay*
- 45 Android Auto*

Multimedia System (Type 2)

53 Multimedia Unit (Type 2)
- 53 Overview of Multimedia Unit (Type 2)

54 Device and Operation
- 54 Steering Wheel Control Buttons
- 56 Turning Off/On the System

57 Vehicle Setting
- 57 Sound

58 Multimedia Entertainment
- 58 Media Mode
- 59 Radio
- 62 Bluetooth Music
- 67 USB Music

71 Phone
- 71 Bluetooth Phone Function

THIS PAGE IS INTENTIONALLY LEFT BLANK

Operation Instructions

Note to Users

- Do not use mobile phone while driving. Park the vehicle in a safe place first if you need to use the mobile phone.
- If there is a difference in the traffic regulations and the current traffic condition always take precedence over the navigation system.
- The use of navigation system does not mean that the responsibilities of driver can be replaced. Observe and oblige to traffic rules. Pay attention to the current traffic condition consistently.
- For safety reasons, only operate the navigation system menu before driving or when the vehicle is stationary.
- In case there is only one road or the road is damaged or closed from vehicle entry (e. g. pedestrian street), the navigation system may give a warning. Pay close attention to the warning given.
- The navigation system will not consider route safety when planning a route. Roadblocks, locations of buildings, height and weight limits, traffic and weather conditions or other issues that can affect the safety and driving time will also not be considered in the proposed route. Therefore, it is up to the driver to decide which route is the most suitable route.
- The speed limit stipulated by current road traffic regulations should be more reliable than the system storage most of the time. There is no guarantee that the speed limit shown by the navigation system is the same as that stipulated by the traffic law under any circumstances.
- Do not solely rely on the navigation system to find emergency services (e.g. hospitals, fire-fighting facilities, etc). There is no guarantee that all nearby emergency services in the database are up to date. In this case, driver judgement is required in event of emergency.

It is not recommended to use the navigation system when the engine is turned off. If this is done, the battery may lose power or drain to flat condition. Always keep the engine running when using the navigation system.

Do not disassemble or modify this device. Otherwise, it may result to accidents, fire and electric shock.

Laws in some provinces and cities prohibit drivers from watching videos during driving. Use the system carefully. ◄

Safety Information

This manual provides information on all variants available for this vehicle model. Due to the differences of configurations, the descriptions in this manual may differ from the actual configuration of your vehicle. The vehicle you actually receive shall prevail.

Warning

Ignoring the warning may cause serious injury or death. The stated instructions or requirements must be strictly followed.◄

Caution

Instructions and requirements stated in the caution must be strictly observed. Otherwise, your vehicle might be damaged.◄

Note

Indicative descriptions for better understanding on some information about the use of this vehicle.◄

Environmental Protection

Issues described are related to environmental protection.◄

Asterisk

The asterisk "*" symbol following a title or name indicates that the configuration or function described is subjected to certain variants of this vehicle model. Your vehicle may not fitted with the stated configuration or feature.◄

Graphical Information

Indicates a descriptive object.

Indicates the movement direction of an object.

Indicates the rotation direction of an object.

Indicates that this action is forbidden or this situation must not occur.

Disclaimers

This Manual has been written in compliance with such laws and regulations currently in force. PROTON reserves the right to make such amendments and/or revisions to this Manual as and when required.

This Manual is a copyright owned by PROTON. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission from PROTON.

All the data contained in the manual are the latest data at the time this manual is published.

The pictures in this manual are for reference purpose only. PROTON reserves the right of final interpretation of this manual.

When transferring the vehicle, please remember to pass this manual on to the new user as this manual is an integral part of the vehicle.◄

This multimedia manual is available at Proton official website, together with the owner's manuals for this model. Refer to QR code provided at the back cover of this manual. ◄

PROTON has the right not to provide the service for you in the following cases:

- Violation of local laws and regulations.
- Provision of false registration information.
- Unauthorized use of services.
- Application of products and services for any illegal purposes.
- Behaviors which harm to the interests of other users.
- Abuse of user rights.
- Behaviors violating social customs and social morality.
- Acts inciting national hatred and discrimination, as well as undermining national unity.
- Acts of spreading obscenity, pornography, gambling, violence, murder, terrorism or abetting crime.
- Acts harming national security, divulging state secrets, subverting state power and undermining national unity.

After correction, PROTON has the right to decide whether to resume the service on the case to case basis.

Notes Before Using Bluetooth

Description of The Wireless Bluetooth Technology

- Wireless Bluetooth technology is based on short-range wireless network technology, which enables different devices to connect in short range at a frequency of 2402 MHz ~ 2480 MHz.
- It supports various electronic devices such as computer, external devices, Bluetooth phones, and PDAs. With regard to application in vehicles, wireless Bluetooth technology can achieve high-speed transmission without using a cable.
- Bluetooth phone means that the user can conveniently make a phone call via Bluetooth connection.
- Some phones may not be supported by the function of Bluetooth phone.

Notices for Safe Driving


- Bluetooth phone can improve the safety of driving. After the phone is connected via Bluetooth function to the system unit, the user can conveniently make a call, answer a call and manage the contact.
- Please read this user manual carefully before using the Bluetooth phone.
- It is prohibited to operate the Bluetooth device frequently while driving. This may cause negligent driving that can result in an accident.
- Avoid looking at the screen for long periods while driving. This is dangerous and may cause an accident.

Reminder for Pairing Bluetooth Phone


- Before pairing your phone to the multimedia system unit, check to see if your phone is equipped with a Bluetooth function.
- If you do not want your vehicle to be automatically Bluetooth connected to your phone, stop the vehicle and deactivate the Bluetooth function in the phone.
- Some Bluetooth functions may not be activated properly due to the software version of the phone. Disconnect the current Bluetooth connection and update your phone with the latest software version provided by the phone manufacturer. Once completed, pair your phone with the system unit again.

Multimedia Unit (Type 1)


Overview of Multimedia Unit (Type 1)

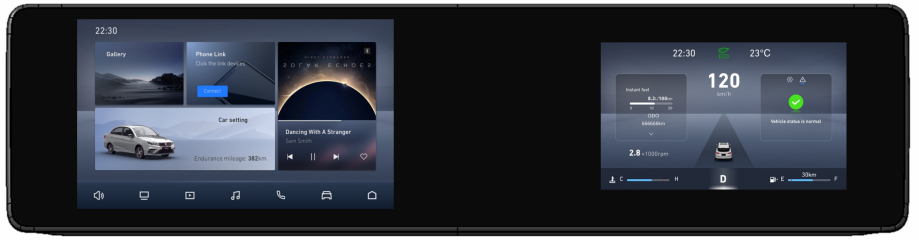

MDU - RHD vehicle (Multimedia unit on left display screen)

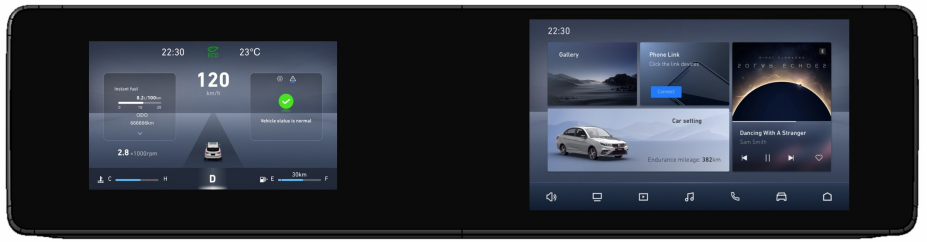


MDU - LHD vehicle (Multimedia unit on right display screen)

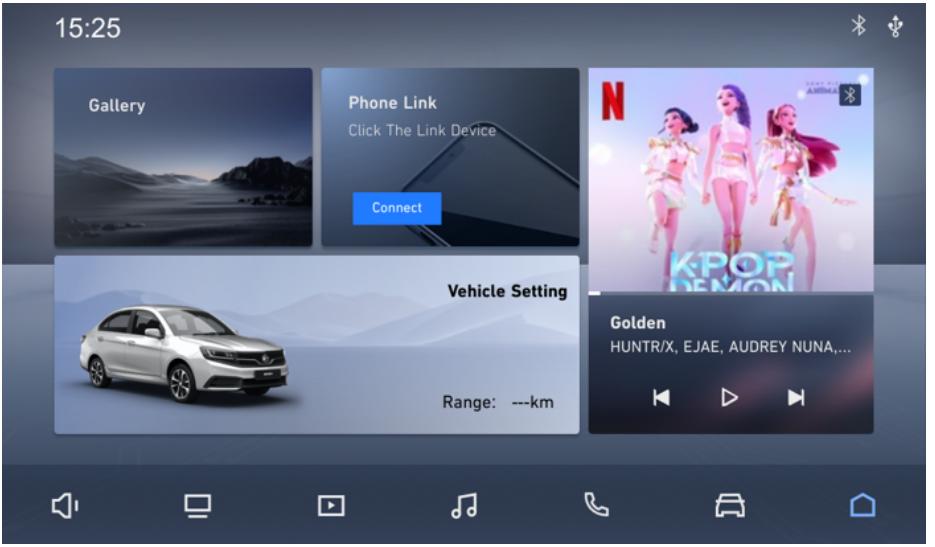


Multimedia Unit Type 1

Device and Operation

Steering Wheel Control Buttons

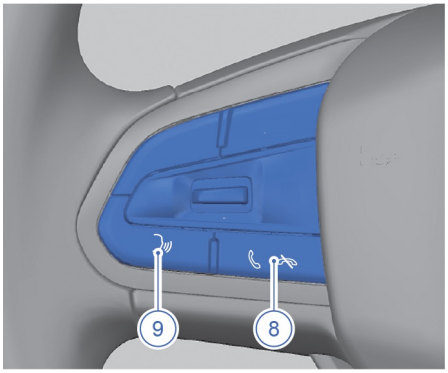

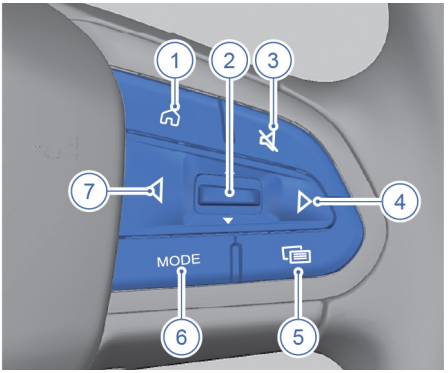

No.	Button Name	Short Press	Long Press
1	Home button	Press this button briefly to return to the previous menu or interface.	—
2	Selection and Confirmation button (volume up/down)	Move this button up or down to adjust (increase or decrease) the audio source volume from the multimedia unit. Press this button to hide regular alert messages or pause the playback of audio source from the multimedia unit.	Move this button up or down to continuously increase or decrease the audio source volume from multimedia unit.
3	Mute button	Short press to mute or unmute the audio source.	—
4	Right Selection button (Next)	To seek or switch to the : • Radio: next station • Music: next song • Video: next video	To seek next station and to fast forward the song or video.
5	Mode Switch button	To switch the control of the multi-control function buttons between the meter instrument and the multimedia unit (open or close the main menu of meter instrument).	
6	MODE button	To change between audio sources.	

No.	Button Name	Short Press	Long Press
7	Left Selection button (Previous)	To seek or switch to the : • Radio: previous station • Music: previous song • Video: previous video	To seek previous station and to rewind the song or video.
8	Call button (phone)	Press this button briefly to : • Answer the Bluetooth phone. • Hang up during a call or cancel making a call. • Enter phone interface when in idle.	Press and hold this button to : • Hang up during a call or cancel making a call. • Dial the last call when in idle.
9	Voice button* (VR, Voice Recognition)	When VR is not activated, press this button to enter the VR mode function. When VR is activated, press this button to exit the VR mode function.	

Touchscreen Operation

No.	Finger Gestures	Action
1		Tap : Activate an application, activate button functions and locate the progress bar
2		Horizontal scroll or swipe : Move or drag a page to the left or right
3		Double tap with one finger : to enter the interface or apps
4		Squeeze inwards : squeeze using two fingers inwards to zoom in
5		Squeeze outwards : squeeze using two fingers outwards to zoom out


System Start-up

When the power of the system is OFF, turn the ignition to ACC or ON position and the multimedia system will start automatically. A start-up image and a warning message will pop up on the multimedia screen.

Start-up Image




Warning Image

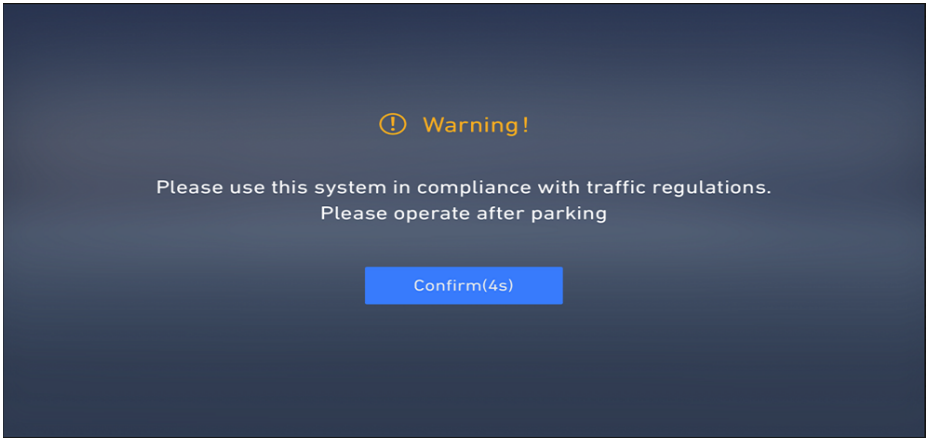


System Shutdown

When the power of the system is ACC or ON position, turn the ignition to OFF and a reminder and a warning message will pop up on the multimedia screen:

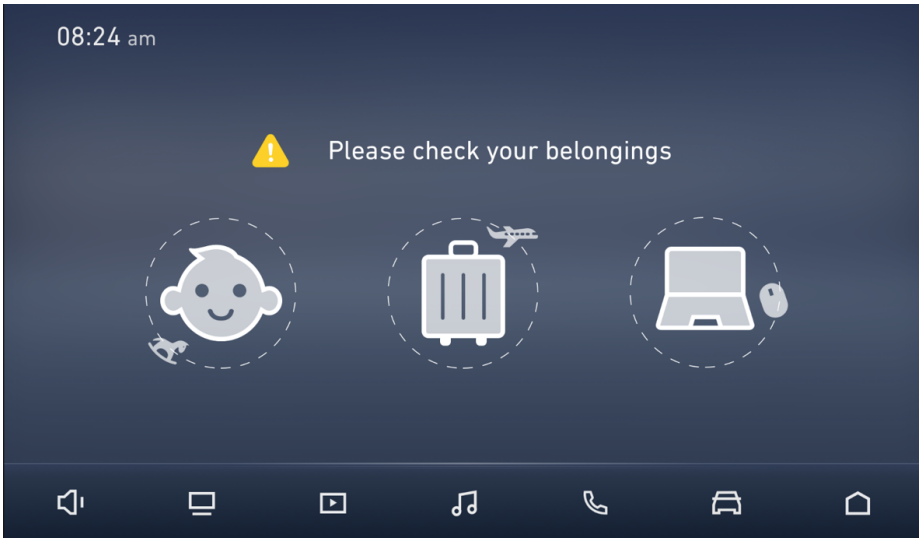

1. Make sure all passengers has left out the vehicle.
2. Do not left important baggages inside the vehicle.
3. Do not left any electronic devices inside the vehicle.


Screensaver (Lock Screen)

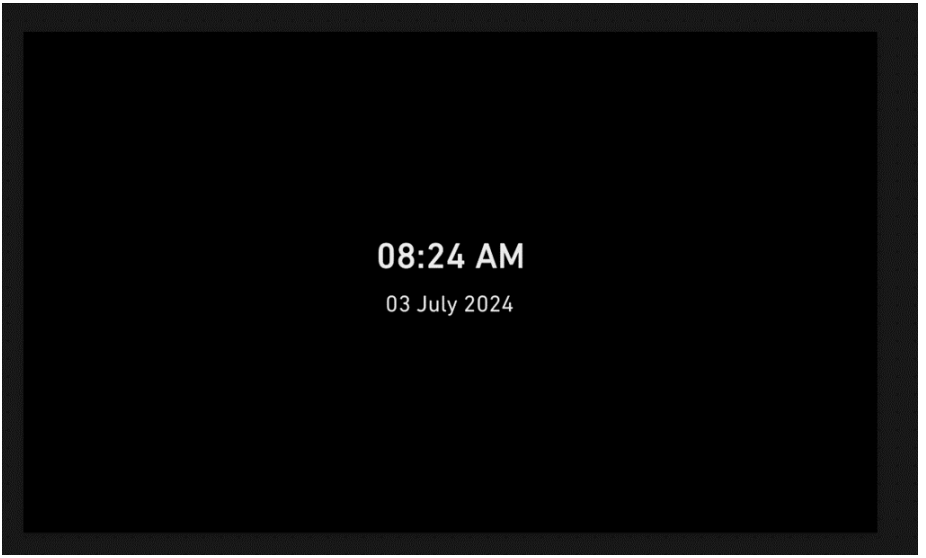

- Tap the Screensaver icon to enter the Screensaver or lock screen interface.
- After the screen is locked, tap on any area of the interface to unlock (exit) the screensaver interface.
- Long or short press the Power button will also unlock (exit) the screensaver interface

Homepage (Home Screen)


The home screen is designed to give you the experience similar to that of Android devices. On the homepage, at the most left side widget is set for navigation and the middle / right side widgets are for available applications in multimedia unit.

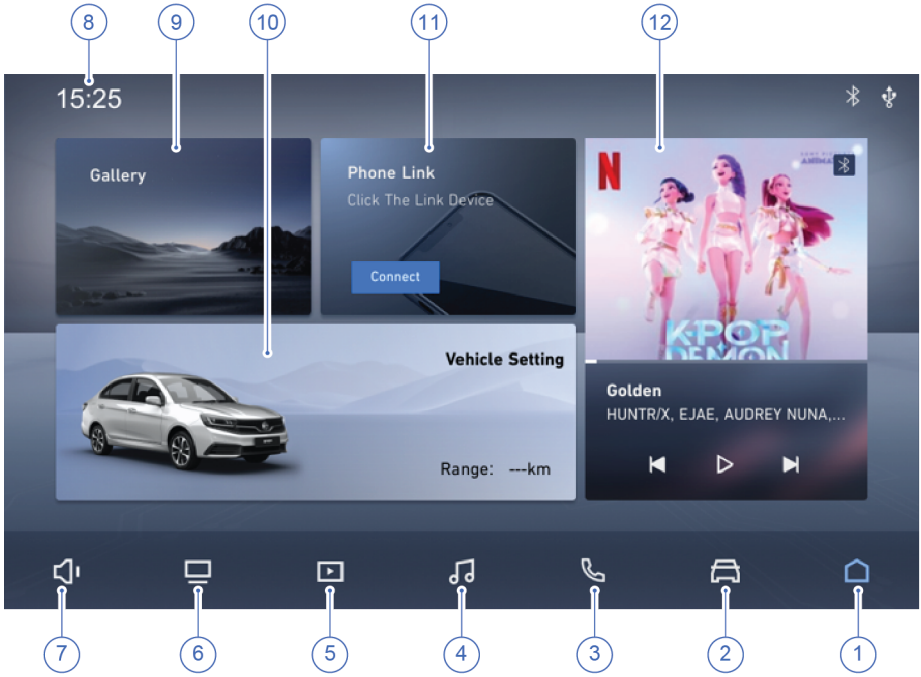

1	Home (back to homepage)	7	Volume Setting
2	Settings	8	Clock
3	Phone	9	Gallery
4	Media App (Radio/Audio)	10	Vehicle Setting
5	Media (Video)	11	Phone Link (AACP*)
6	Screensaver	12	Media Widget


Vehicle Setting

Vehicle

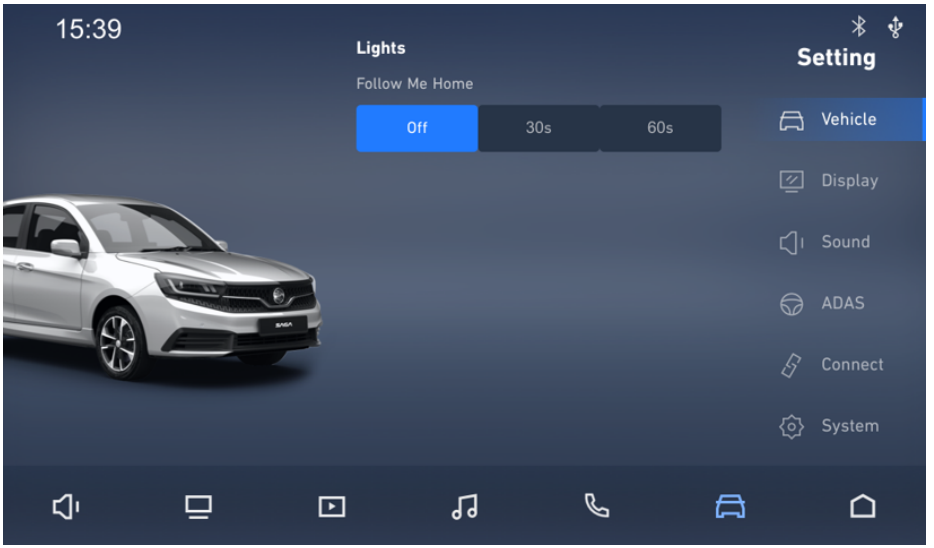


Click the following on the multimedia display in sequence:
Vehicle Setting → Vehicle.
In Lights interface, you can disable the **Follow Me Home** function by click Off or enable the Follow Me Home function by selecting the 30 seconds or 60 seconds duration.

Display

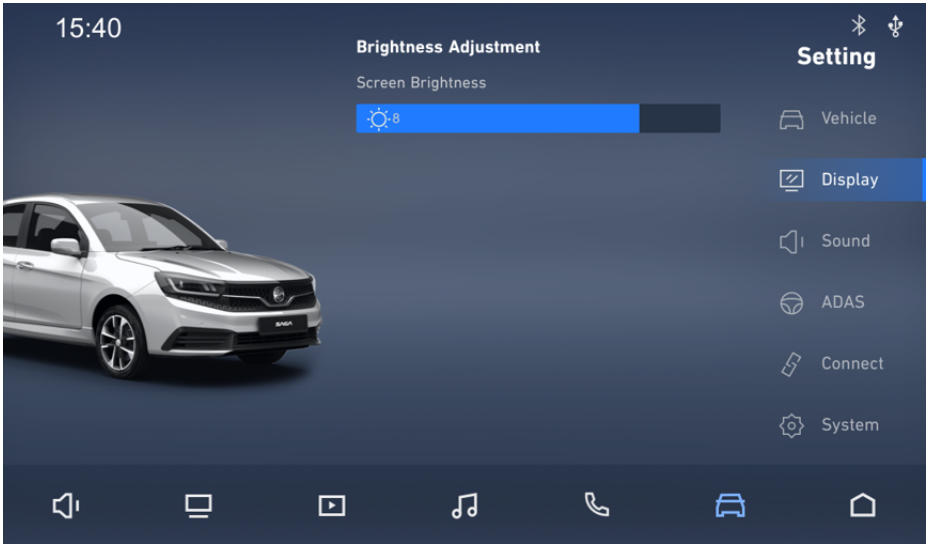

Click the following on the multimedia display in sequence:
Vehicle Setting → **Display**.
In Brightness Adjustment interface, you can set the backlight / screen brightness.

Sound

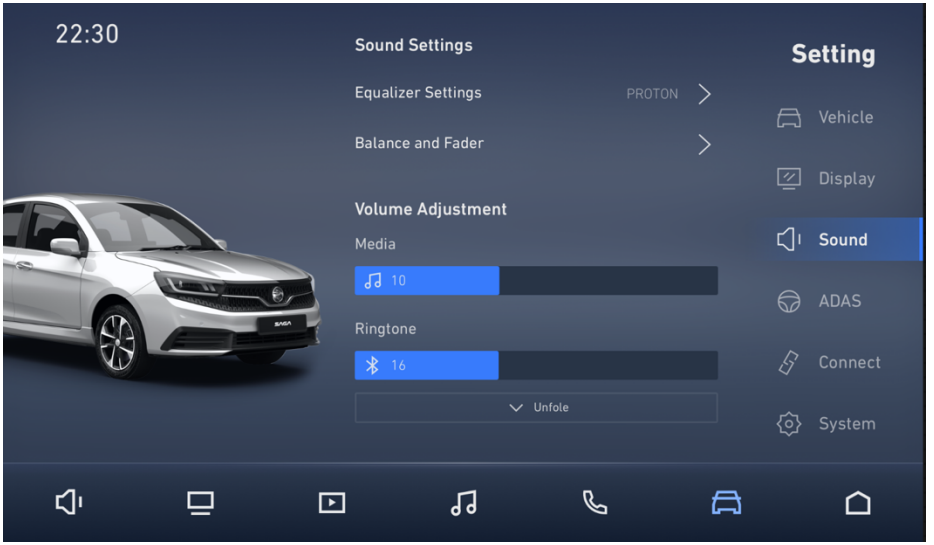


Click the following on the multimedia display in sequence:
Vehicle Setting → Sound.
This interface contains sound settings of Equalizer Settings, Balance and Fader adjustment, Media volume adjustment and Ringtone volume adjustment.

Equalizer Settings


Click the following on the multimedia display in sequence:
Vehicle Setting → Sound → Equalizer Settings.

In Equalizer Settings interface, you can directly select your desired sound mode based on the preset sound modes of PROTON, CLASSICAL, HEAVY METAL, HIP HOP, JAZZ, POPULAR, and ROCK.

You can also click on CUSTOM mode to adjust the sound setting by adjusting the slider knobs at different frequencies according to your preference.

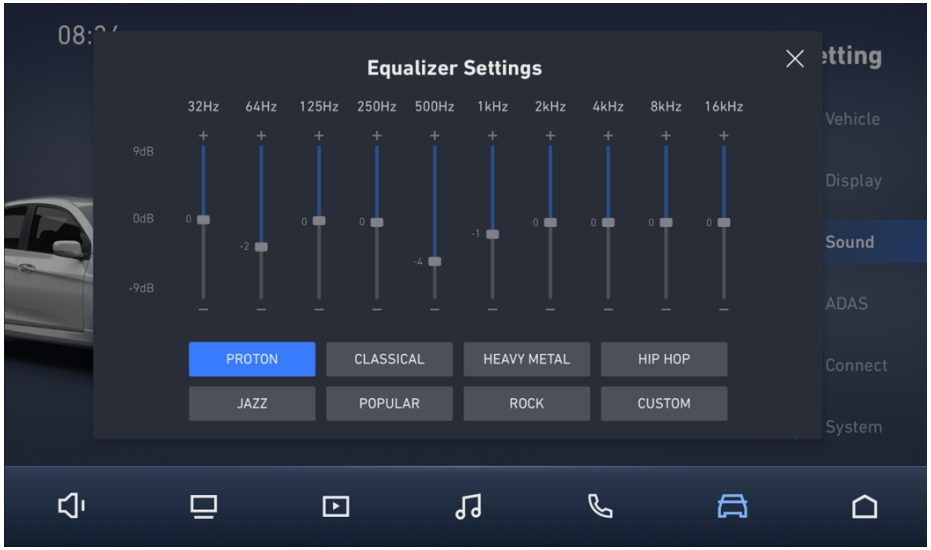


Safety Tone

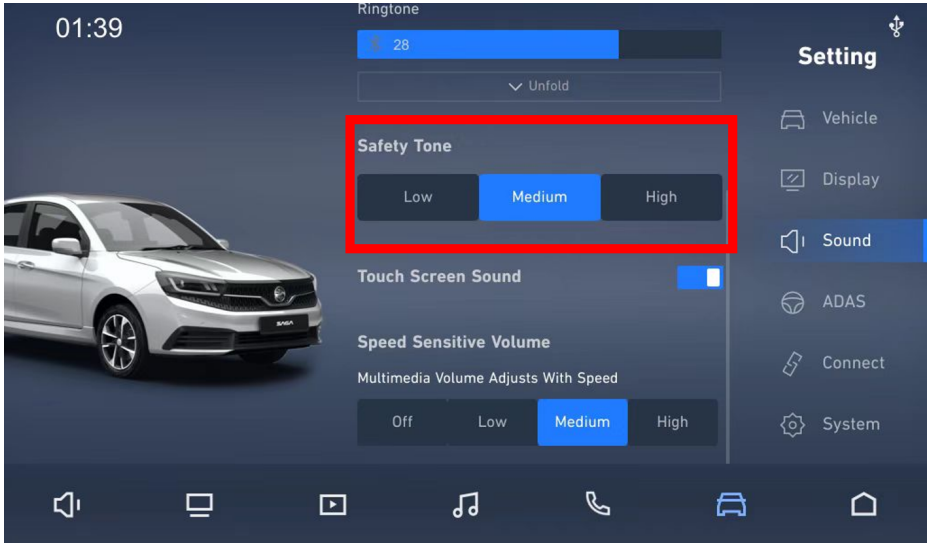


The safety or alarm tone volume can be set to Low, Medium, or High level.

Touch Screen Sound

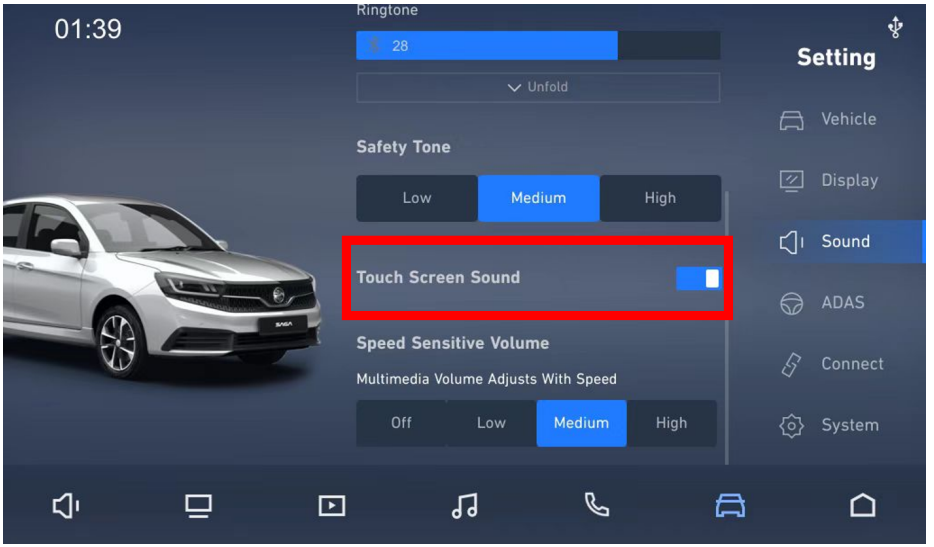

User can enable or disable the sound when performing touch screen operation on the multimedia unit.

Speed Sensitive Volume

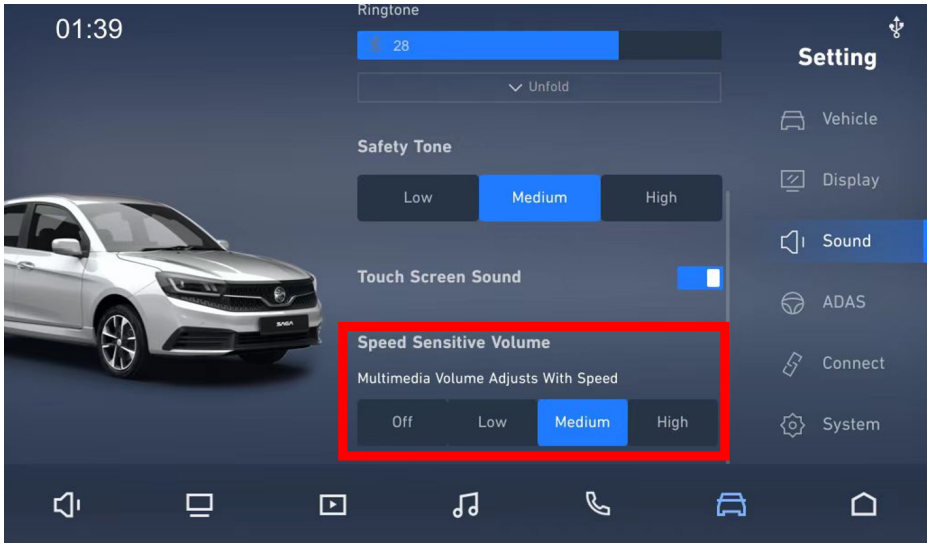

When activated, the Speed Sensitive Volume function automatically adjusts the multimedia unit volume according to vehicle speed to compensate for engine and tyre noise.
The Speed Sensitive Volume function can be manually set to Off, Low, Medium, or High. The default setting is Medium.


The Speed Sensitive Volume function operates up to 150 km/h. If the vehicle speed exceeds this limit, volume adjustment will remain based on 150 km/h. ◄

The following conditions apply to the vehicle speed compensation function:

1. When the volume is set to 0 or the sound is muted, vehicle speed compensation is not applied.
2. When the volume is at maximum, vehicle speed compensation is not applied.
3. The compensated volume will not exceed the maximum volume (MAX).
4. When the system is switched from POWER OFF to ON or from ACC OFF to ON, the normal volume level is first restored and then readjusted according to the vehicle speed.

Connection


Connection via Bluetooth

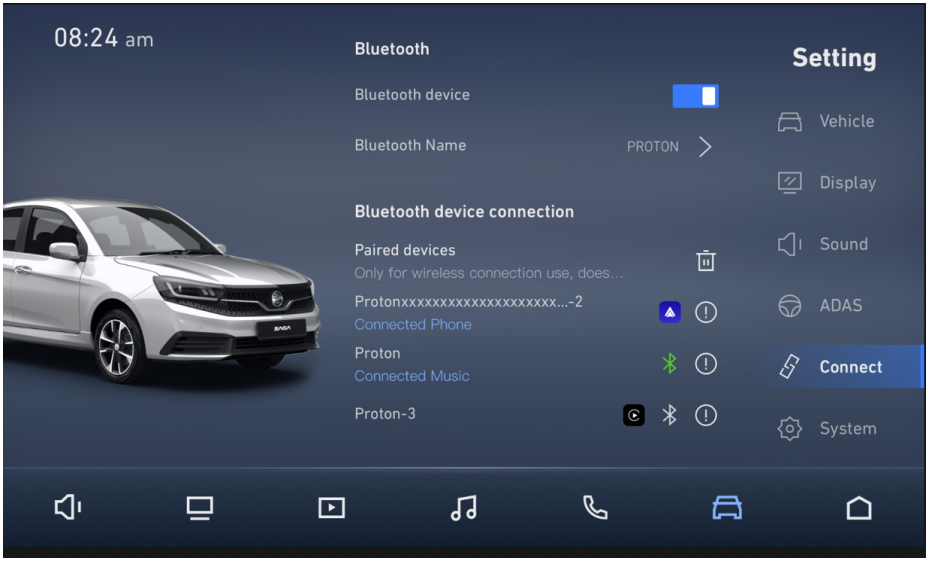


From the Homepage interface, click the following on the multimedia display in sequence:
Vehicle Settings → **Connect**, and Bluetooth interface will open.
Turn on the Bluetooth device feature and pair to mobile phone to enable the Apple CarPlay or Android Auto connection.

Click the following on the multimedia display in sequence:
Vehicle Settings → **Connection** → **Bluetooth Device**.
In this interface, you can turn on or off the Bluetooth function. After you turn on the Bluetooth function, it will search for available Bluetooth devices. You can turn on the Bluetooth of your mobile phone for pairing. Then, select the Bluetooth of your own mobile phone for pairing. You will receive a pairing message notification on your phone.

ADAS*

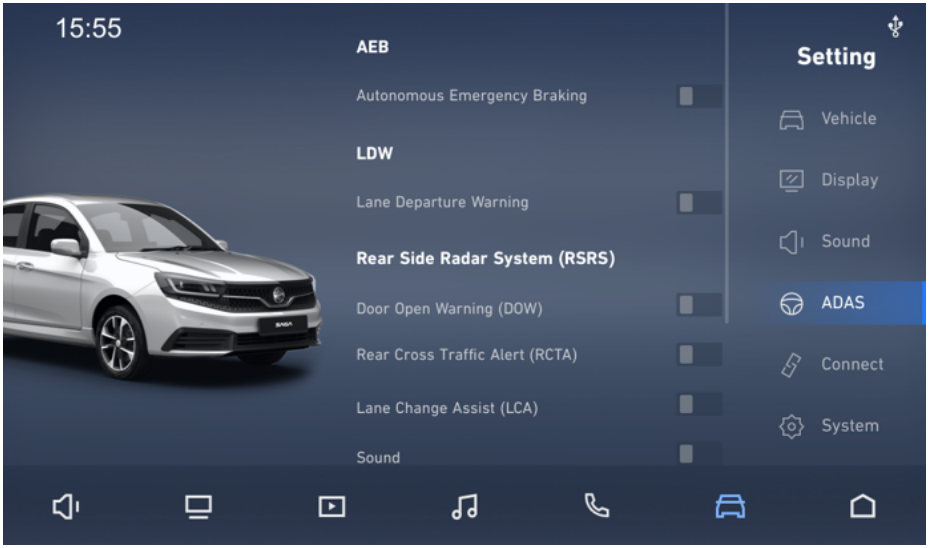


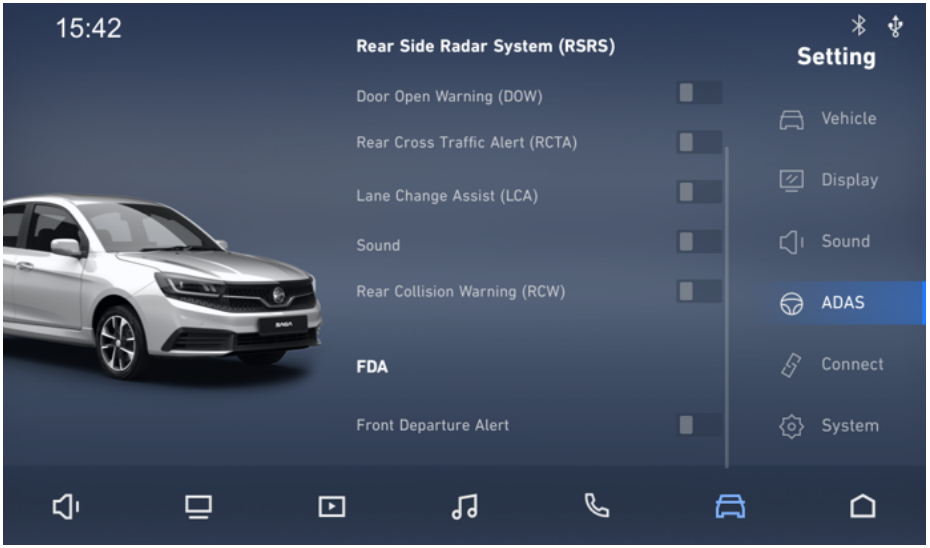

Click the following on the multimedia display in sequence: **Vehicle Setting** → **ADAS**.
In ADAS interface, you can enable or disable vehicle safety functions such as AEB, LDW, RSRS, and FDA.

Multimedia Entertainment

Media App

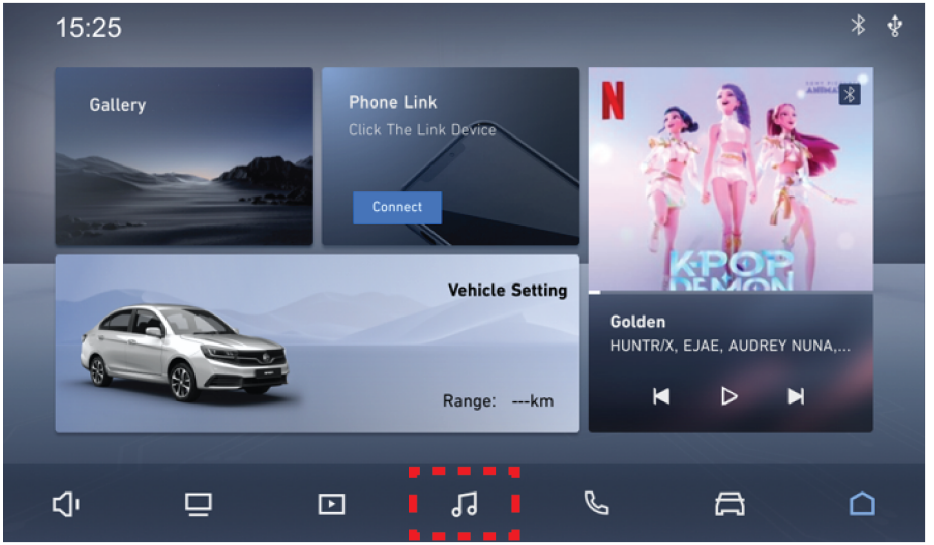

Tap to open Media app icon at the homepage interface to enter the media interface and select between Radio, USB music or Bluetooth music as source of multimedia entertainment.

Disclaimer on Video and Audio Playback


For optimal performance and compatibility, ensure that video files adhere to standard encoding parameters. Non-standard settings, such as mismatched frame rates or bit rates, may result in playback errors, system instability, or the audio and video becoming out of sync.

Recommended Video and Audio Parameters

Parameter	Definition	Standard / Common Values	Description
Resolution	Image clarity or pixel count	1920×1080 (Full HD) 1280×720 (HD) 3840×2160 (4K)	Determines image detail level
Frame Rate	Number of frames displayed per second	24fps (Film) 30fps (Standard) 60fps (High Frame Rate)	Higher values provide smoother motion but increase file size
Bitrate	Amount of data transmitted per second	2–5 Mbps (720p) 5–10 Mbps (1080p) 15–25 Mbps (4K)	Affects video quality and file size
Codec	Compression algorithm	H.264 (AVC) H.265 (HEVC)	Determines compression efficiency and image quality
Audio Sample Rate	Number of audio samples per second	44.1 kHz / 48 kHz	Higher rates provide better sound quality
Audio Bitrate	Amount of audio data transmitted per second	128–320 kbps	Higher bitrates improve clarity
Color Space	Color model used for image representation	YUV420 (Common)	Ensures compatibility with most devices
File Extension	File format identifier	.mp4	Common video file type

Radio


Introduction to Radio Interface

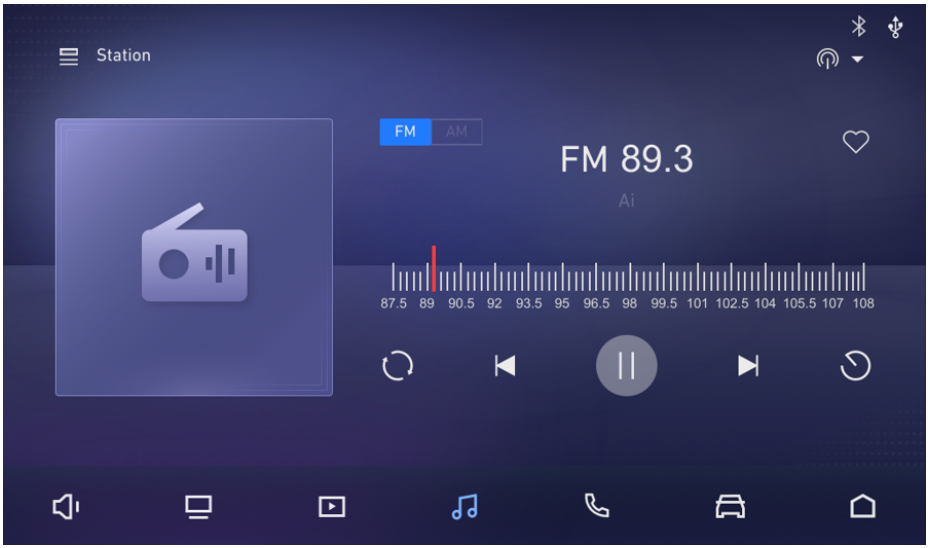

The AM/FM radio broadcasts are supported.

1. Switch between FM and AM
2. Seek radio stations via scan
3. Adding radio stations to favorites
4. Station list - canview scanned stations
5. Previous station - automatically search for the last available radio station and play
6. Pause Radio
7. Next station - automatically search for the last available radio station and play
8. Display station name

Radio Setting Interface

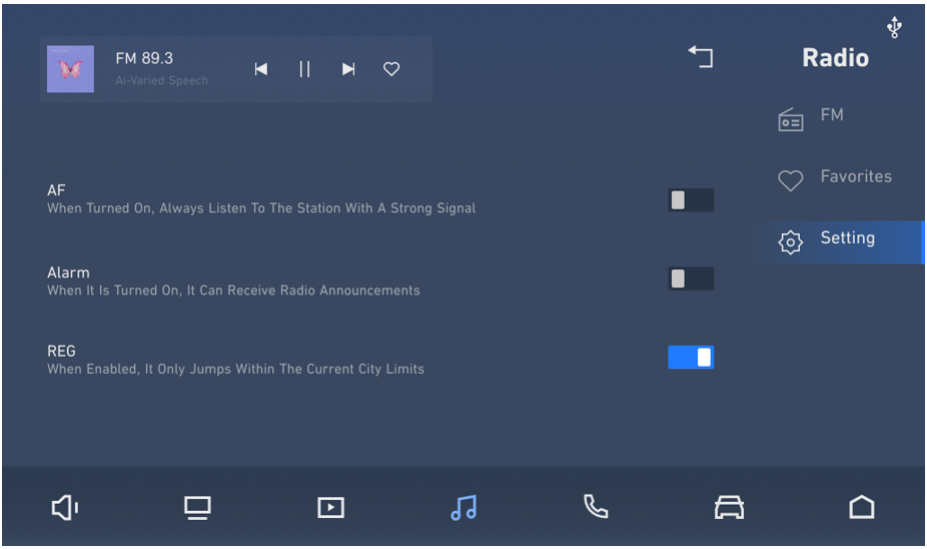


In the Radio Setting interface, there are three radio settings that can be enabled/disabled:

1. AF – the system will broadcast any radio station with a strong signal.
2. Alarm (Traffic Alarm) – the system will play any traffic announcement / broadcast.
3. REG – the system will jump to the current city broadcast limit.

USB Music and Bluetooth Music


You can connect your multimedia unit via USB or Bluetooth for seamless media access. The supported audio formats include 3GP, FLV, MKV, WMV, MPG and MOV. There will be a file corruption report or the file cannot be recognized for other formats.

USB Music Playback: Play music directly from a USB flash drive using the built-in audio app.

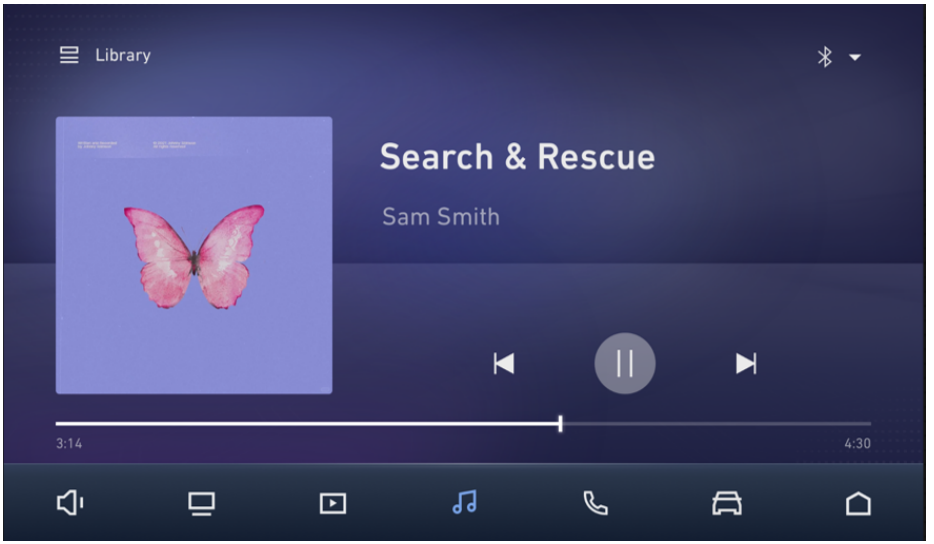


After inserting the USB flash drive, it is possible to read and play the music files in the USB flash drive.

Bluetooth Music

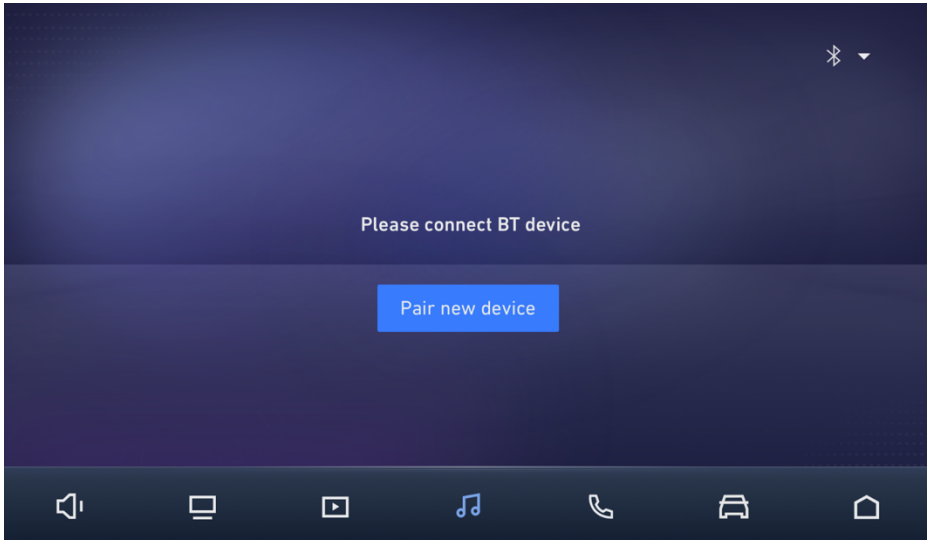

After your mobile phone is connected to Bluetooth, it is possible to play music from your mobile phone.

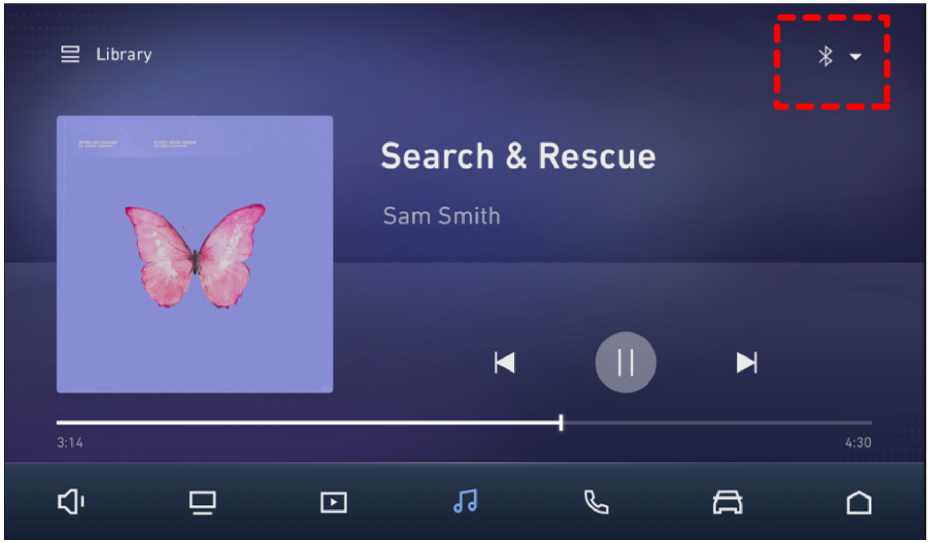


To change the media mode in between Radio, USB & BT, can tap the small arrow and confirm the chosen media mode.

Phone

Bluetooth Phone Function

This multimedia unit is equipped with Bluetooth Phone function so that you can easily place or answer calls directly through the multimedia screen without reaching for your mobile phone.


Tap to open Phone icon at the homepage interface.

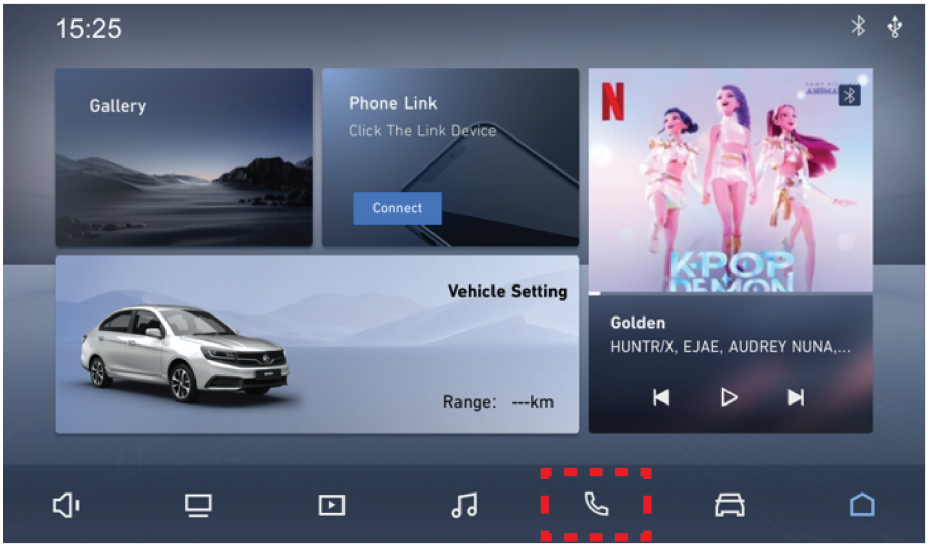


Before making a call, via multimedia unit, it is advised to connect the phone via Bluetooth pairing.◄

Pairing Bluetooth Phone

Tap the Vehicle Setting widget at the homepage interface.
Select **Connect** tab from the Setting list to turn on/off the Bluetooth function and customize Bluetooth information. Search for available devices to be paired to the multimedia unit.

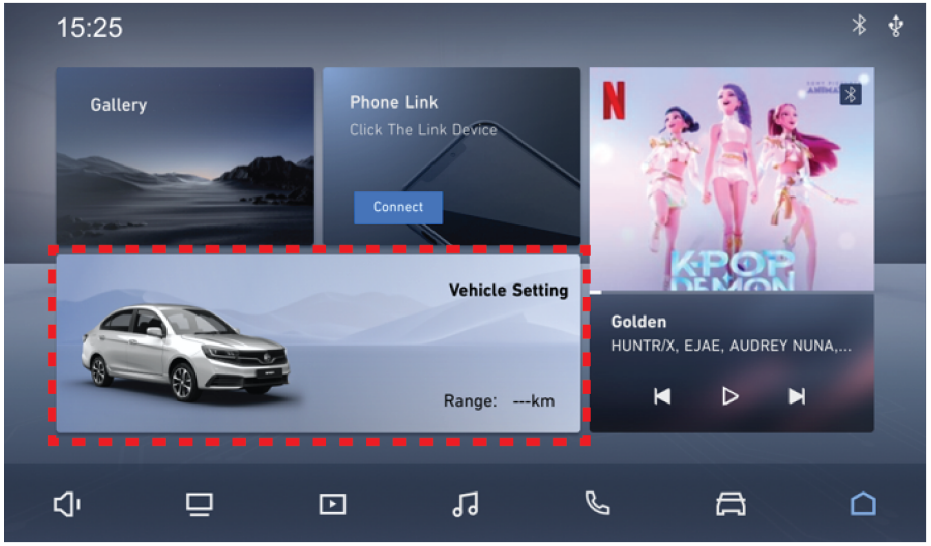

The selected mobile device will receive pairing notification requesting to confirm the pairing process.

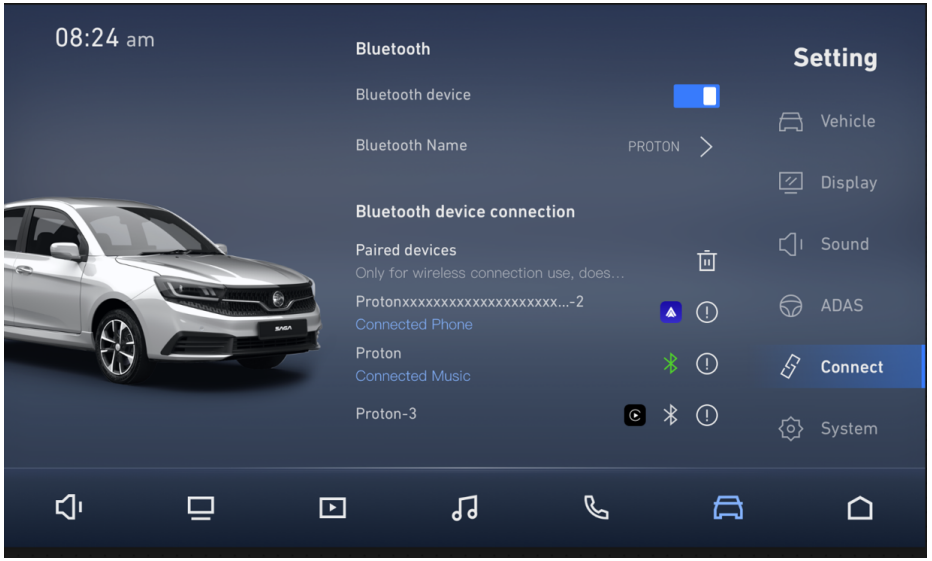


Dialing


While the Bluetooth phone function is active:
Various methods of making a call using the multimedia unit are as follows.

Tap the name or dial and then tap the phone icon to start dialing:

1. Call via keypad.

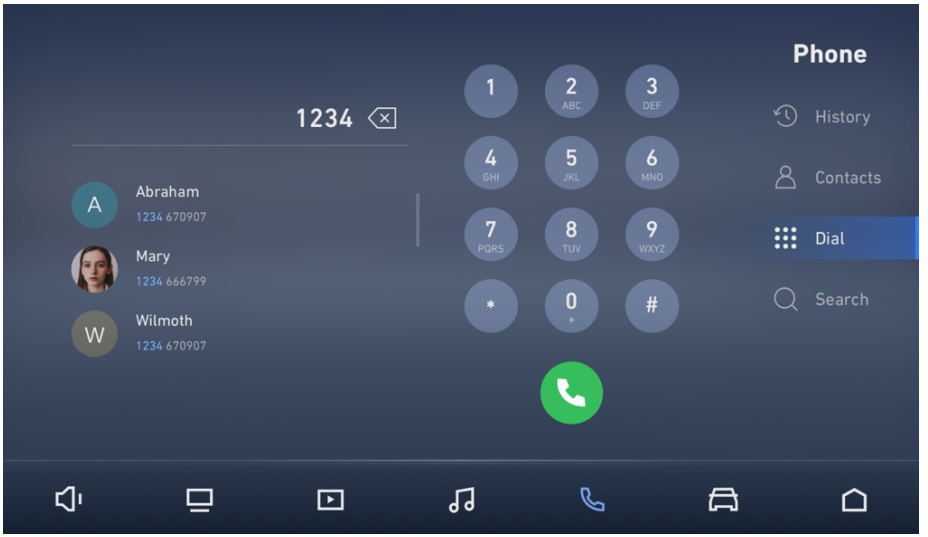

2. Call via contacts.

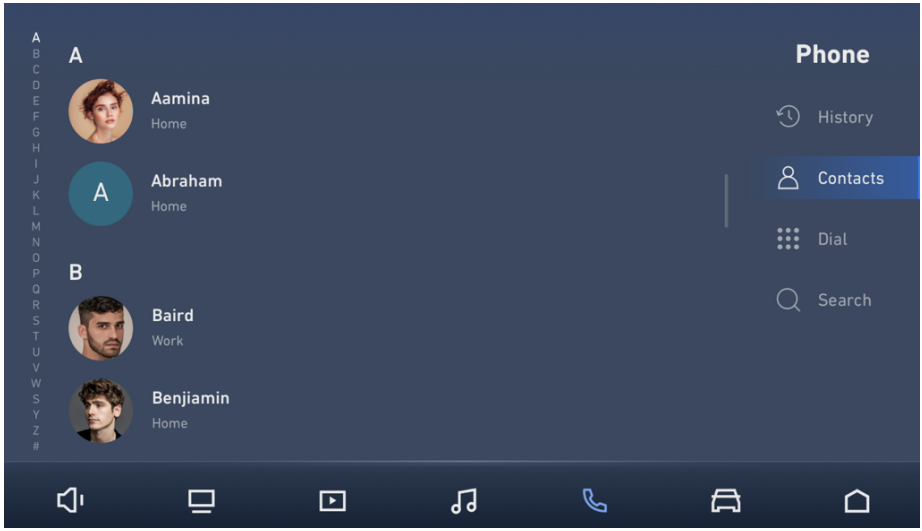

3. Call via recent calls (History).


Answering and Hanging Up

Answering and hanging up calls can be done via steering wheel control buttons (the multi-function control buttons at the steering wheel).

While the Bluetooth phone function is active:

- Press Phone button on the steering wheel to answer or hang up the call.
- During the call, adjust the call volume by pressing up/down the volume button.

Tap on to the name or contact number to make Bluetooth phone call.
You can answer, hold, reject or hang up via multimedia unit on Bluetooth phone call interface as below:

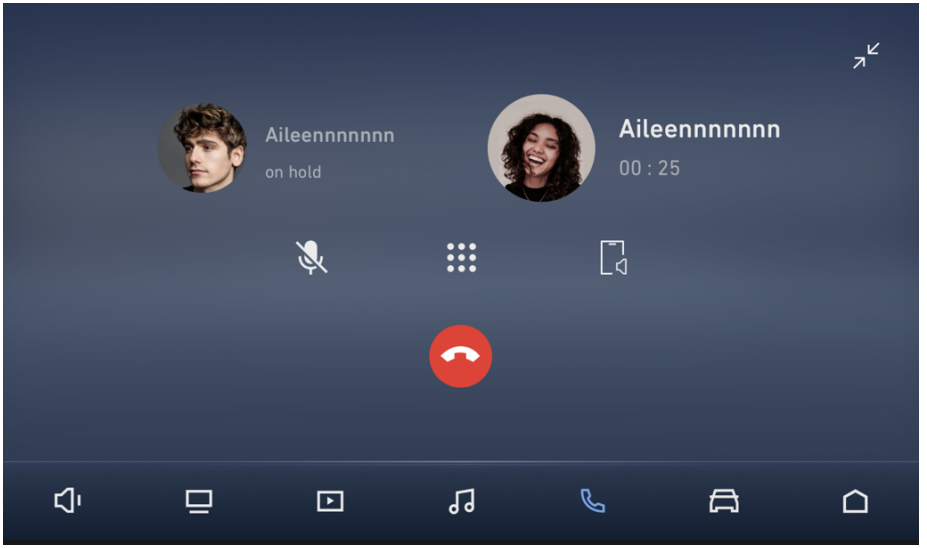


Call Status Display: Shows real-time call information, including active calls and any calls placed on hold, for clear and easy call management.



Gallery


Photo and Video

Display images and videos from USB in **Gallery** interface, for easy viewing and access.

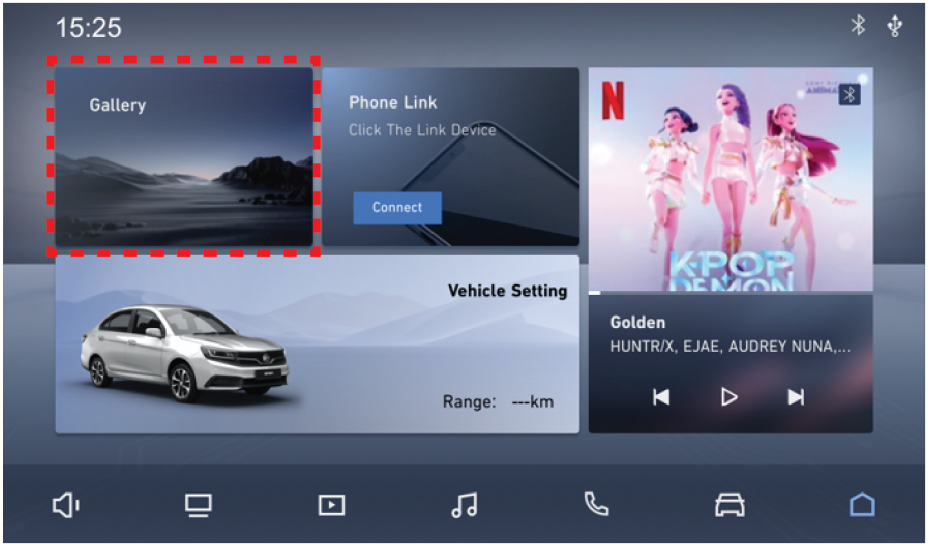

Click the Gallery widget from the homepage interface to enter the gallery interface.

In gallery interface, you can view the album photos and pictures stored in the USB flash drive.

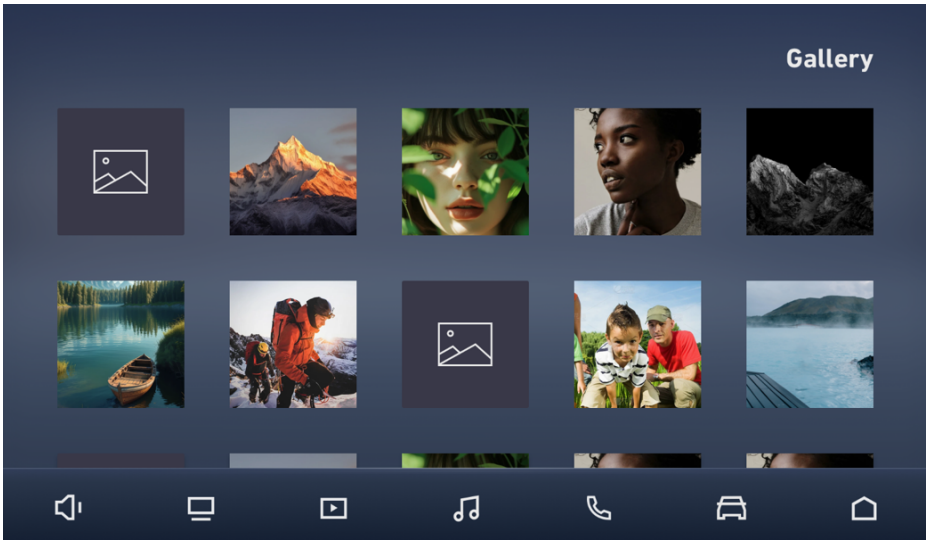


THIS PAGE IS INTENTIONALLY LEFT BLANK

Andriod Auto Apple Carplay*

Description of AACP

AACP (Android Auto and Apple CarPlay) is an advanced infotainment feature that allows seamless smart phone integration with your PROTON vehicle's multimedia unit.
It enables drivers to access navigation, music, calls, and messages safely through the vehicle’s touchscreen or voice commands.
Select Phone Link widget at homepage to connect or to open the connected phone interface.

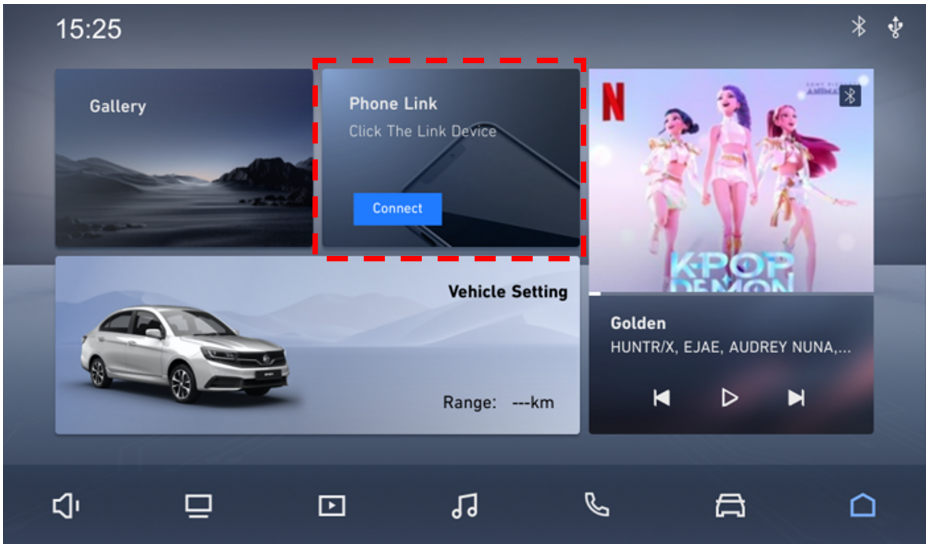

Connection Mode For Apple CarPlay:

1. Use a certified cable for your iPhone.
2. Plug it into the vehicle’s USB port.
3. Follow the on-screen prompts to enable Apple CarPlay

Connection Mode For Android Auto:

1. Ensure your phone has the Android Auto app installed.
2. Use a high-quality USB cable to connect your phone.
3. Follow the head unit instructions to activate Android Auto.

For wireless connectivity, ensure Bluetooth is enabled on your phone, then pair it with the multimedia unit.◄

Apple CarPlay*

About Apple CarPlay

CarPlay brings the most useful apps from mobile phone to vehicle screen of multimedia unit, optimized for easy glancing and control while driving. With CarPlay you can get turn-by-turn directions, make phone calls, text messages, listen to music and more all from your vehicle screen of multimedia unit.

Basic Requirement

- An iPhone with iOS 5.0 or higher, an active data plan, Wi-Fi support, Bluetooth support and update your phone to the latest iOS version.
- A vehicle multimedia unit that is compatible Apple CarPlay.
- An Apple Lightning to USB cable or a high-quality certified USB cable.
- Siri must be enabled to use Apple CarPlay.


Connect Apple CarPlay via with USB Cable



- Keep your iPhone's Siri turn ON.
- Ensure your vehicle is in Park (P) and the parking brake is engaged before starting the setup to prevent distractions.
- Ensure the multimedia unit is powered ON, as Apple CarPlay requires the system to be active.◀

1. Plug the USB cable to your vehicle's USB Port and plug in the other end into your iPhone.
2. Follow on-screen prompts to enable Apple CarPlay. (You may need to tap Apple CarPlay icon on multimedia unit screen and tap "Allow" on the pop-up notification displayed on your iPhone).

Apple CarPlay | Home Screen

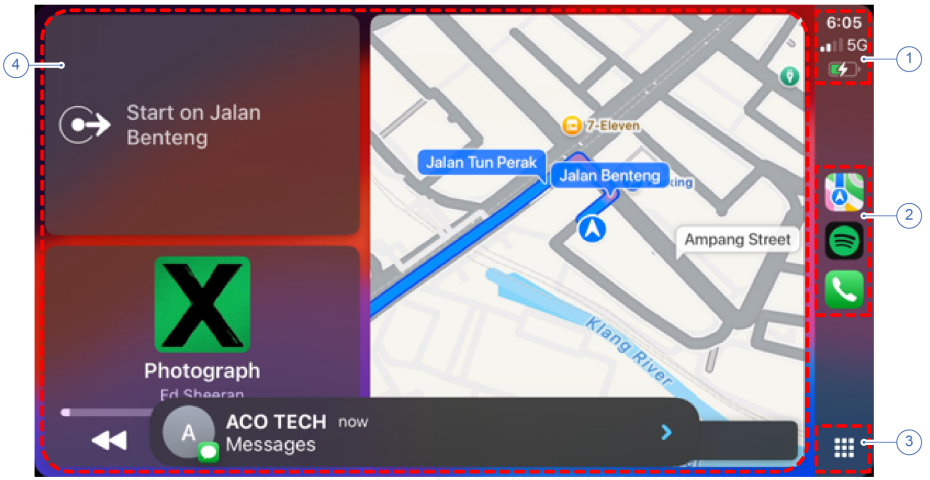


No.	Item	Description
1	Status area	Signal strength, battery status and time.
2	Recent apps	Most recently used apps
3	App launcher	To access list of all available Apple CarPlay apps, tap on the app launcher icon.
4	Dashboard	Maps navigation and recent places, Call and messages, Music and audio, etc.

Apple CarPlay | Voice Command

- Voice command used in Apple CarPlay is “Siri”.
- Siri can be used to access many of your phone’s functions while driving to enter a destination, send messages and make calls without having to pick up your phone.

Activating “Siri”

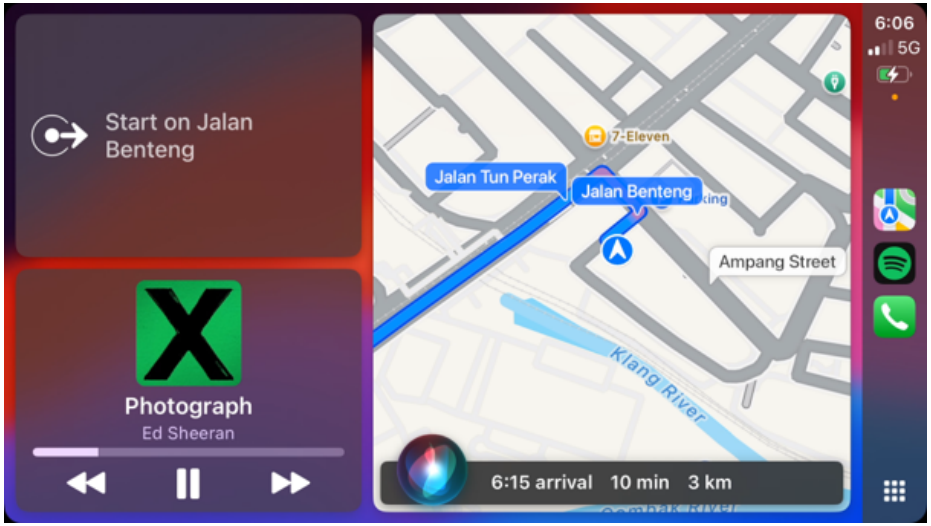

1. Saying Commands:
   - Say “Hey Siri”.
   - The Siri will pop-up on your Apple CarPlay screen, and you will be prompted to say a command.
   - Speak your command clearly.

For more information on Siri functionality visit:https://www.apple.com/ios/siri/ ◄


2. Using the Steering-Wheel Controls button
   - Press and hold the “Voice Recognition” button on the steering wheel to activate Siri.



Voice button at steering wheel


Not all third-party apps support voice recognition through Siri. ◄

Apple CarPlay | Map and Navigation

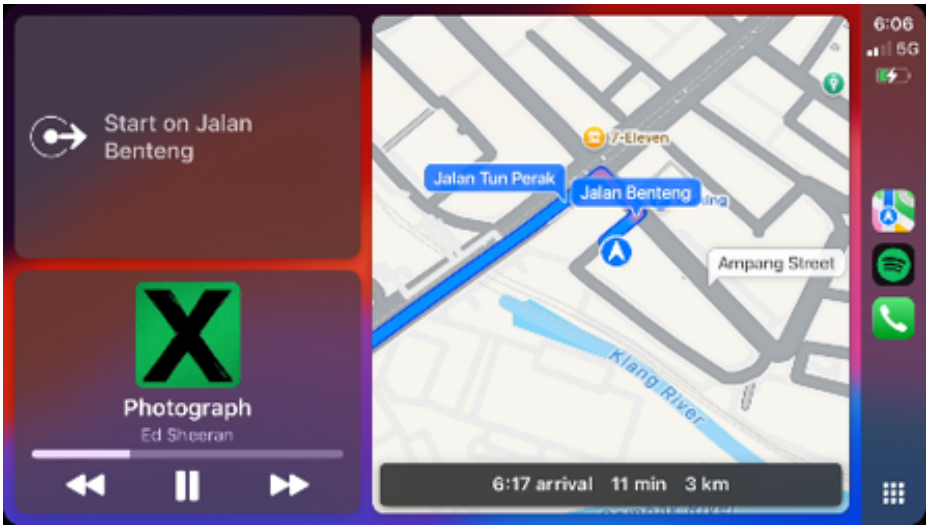


You can navigate using “Apple Maps” or compatible third-party apps such as “Waze”. Provides you voice-guided navigation, estimate arrival times, live traffic information and lane guidance.

Apple CarPlay | Phone Calls

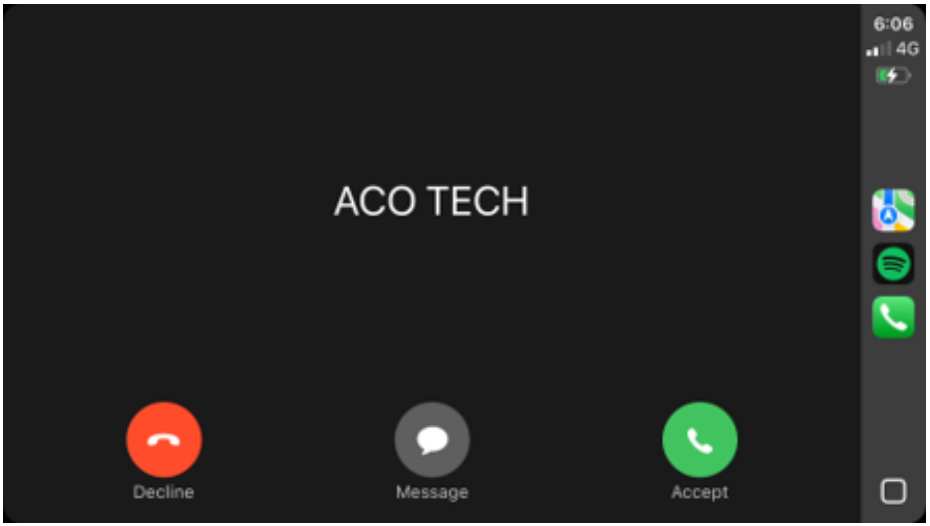


You can make and receive calls with Apple CarPlay. You’ll hear your conversation through your vehicle speakers.

Apple CarPlay | Messages

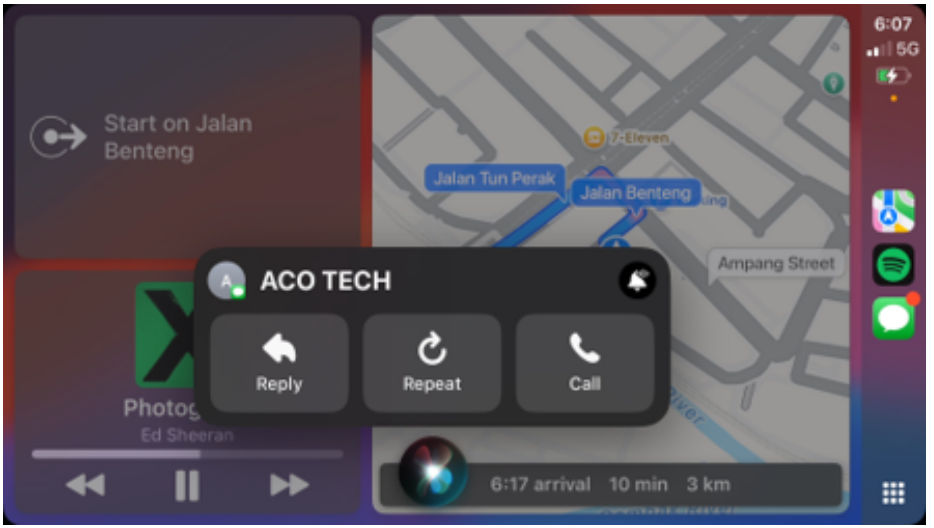

You can tell Siri to send a text message by voice, read your received text messages and messages from third-party apps (e.g. Whatsapp)

Apple CarPlay | Music and Audio

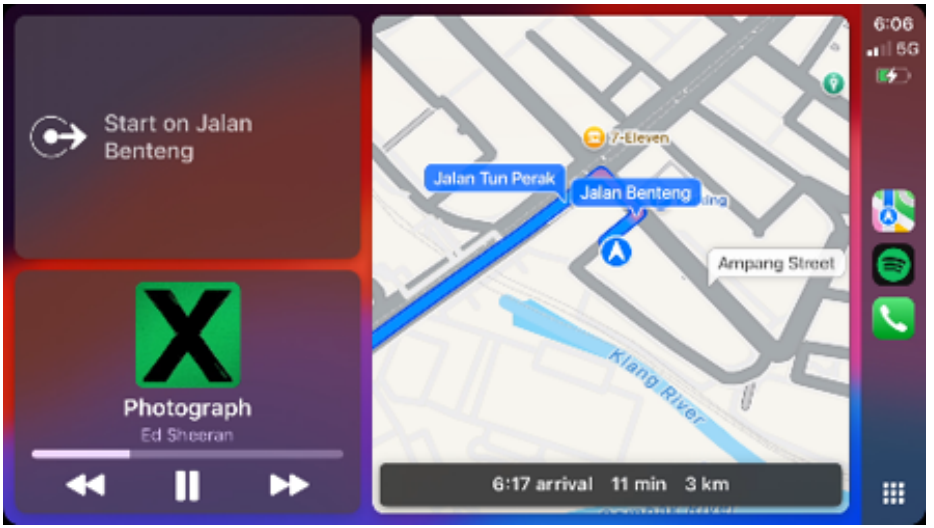

You can access all your favourite music, podcasts, audio books and more are just a command away.

For More Information

- Check your vehicle Owner's Manual for additional instructions.
- Or visit the Apple CarPlay website at https://www.apple.com/ios/carplay/
- The Infotainment System (Multimedia unit) only acts as an intermediary interface for accessing iPhone functions.
- Features and behaviors are dependent on the iPhone device, the iOS version, the app, and the media file played.
- While in Apple CarPlay, the Accept Call Button on your steering wheel can only be used to answer incoming calls.
- When using Apple CarPlay, please avoid distraction and use Apple CarPlay responsibly. Stay fully aware of driving conditions and always obey applicable laws.

Apple CarPlay is a service provided by Apple, Inc. bounded by their terms and conditions. When using Apple CarPlay, information will be sent from your vehicle (including its position) to the connected iPhone. You will be solely responsible for anyone using the service on your vehicle. ◄

Android Auto*


About Android Auto

Android Auto brings the most useful apps from mobile phone to vehicle screen of multimedia unit, optimized for easy glancing and control while driving. You will be able to control things like navigation, maps, calls, text messages and music all from your vehicle screen of multimedia unit.

Basic Requirements

- An Android phone with Android 6.0 or higher, an active data plan, Wi-Fi support, Bluetooth support, Android Auto app and update your phone to the latest Android version.
- A vehicle multimedia unit that is compatible Android Auto.
- A high-quality USB cable which certified USB cable for the in-vehicle connection.

Android Auto | Home Screen

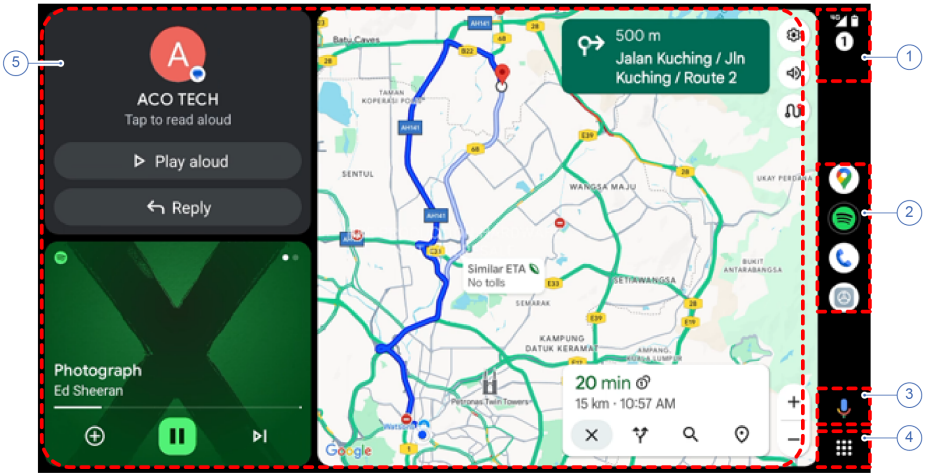


No.	Item	Description
1	Status area	Signal strength, battery status and time.
2	Recent apps	Most recently used apps

No.	Item	Description
3	Microphone	To activate Google Assistant; tap the icon, say “Hey Google” or press and hold the Voice Command button on the steering wheel.
4	App launcher	To access list of all available Apple CarPlay apps; tap on the app launcher icon.
5	Dashboard	Maps navigation and recent places, Call and messages, Music and audio, etc.

Android Auto | Voice Command

- Voice command used in Android Auto is “Google Assistant”.
- Google Assistant can be used to access many of your phone’s functions while driving to enter a destination, send messages and make calls without having to pick up your phone.

Activating “Google Assistant”

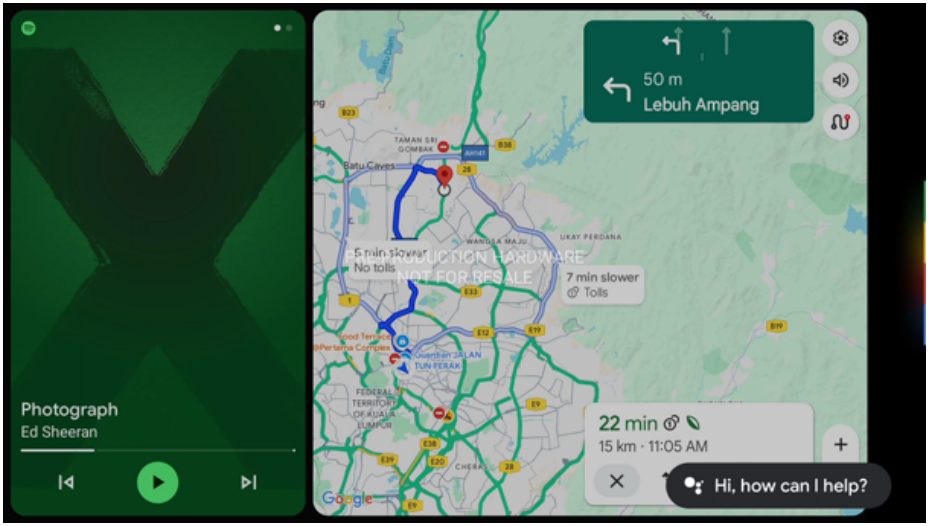

1. Saying Commands
   - Say “Hey Google”.
   - The Google Assistant bar will pop-up on your Android Auto screen, and you will be prompted to say a command.
   - Speak your command clearly.


For more information on functionality of the Google Assistant, visit:
https://assistant. google.com/platforms/cars/ ◀

2. Using the Steering-Wheel Controls button
   - Press and hold the “Voice Recognition” button on the steering wheel to activate Google Assistant.




Not all third-party apps support voice recognition through Siri. ◀

Android Auto | Map and Navigation

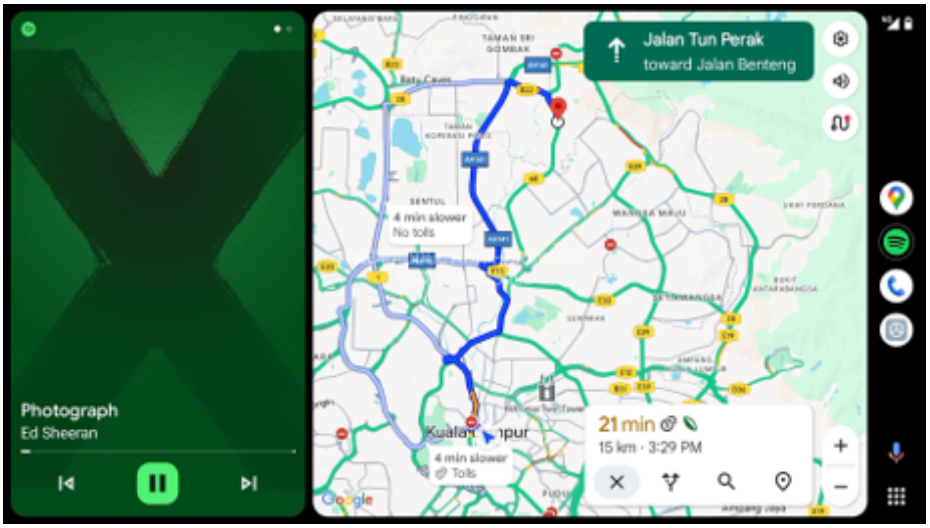


You can navigate using “Google Maps” or compatible third-party apps such as “Waze”. Provides you voice-guided navigation, ETA, live traffic information and lane guidance.

Android Auto | Phone Calls

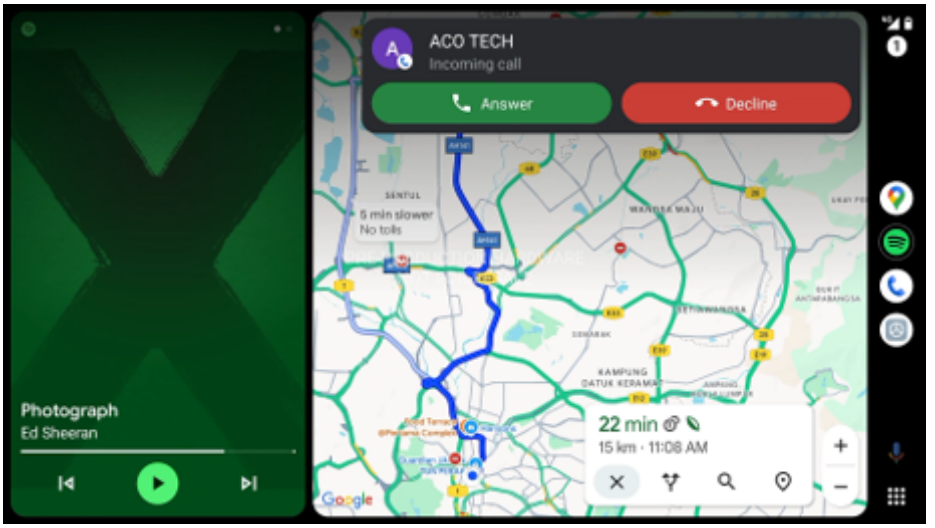


You can make and receive calls with Android Auto. You'll hear your conversation through your vehicle speakers.

Android Auto | Messages

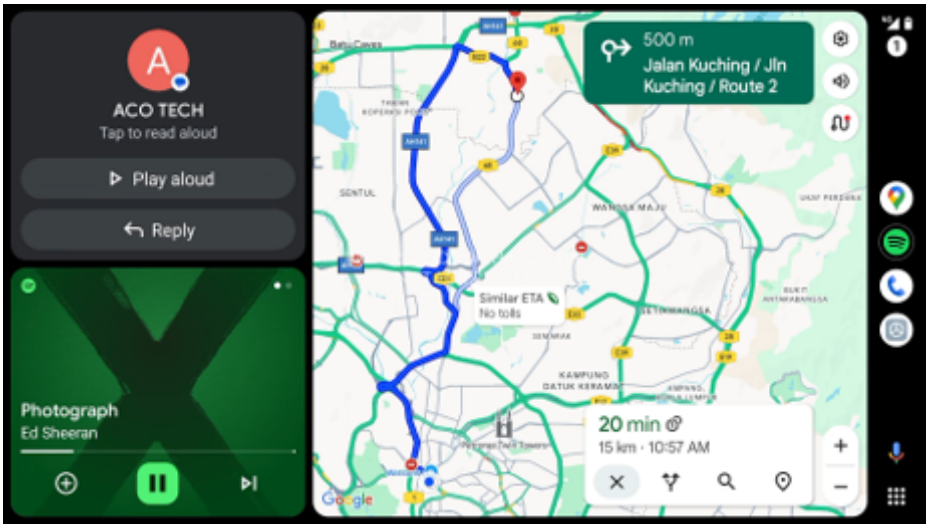

You can tell Google to send a text message by voice, read your received text messages and messages from third-party apps (e.g. Whatsapp).

Android Auto | Music and Audio

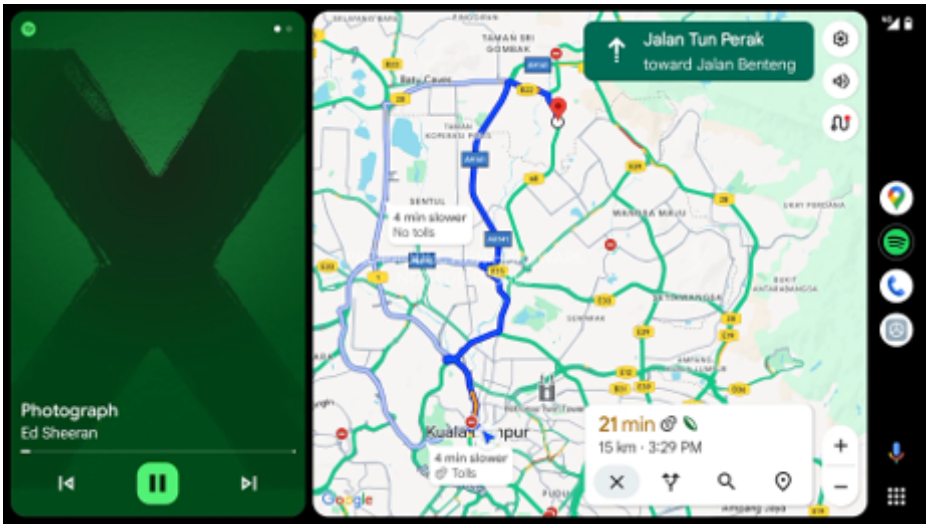

You can access audio entertainment through Google Play Music or compatible third-party music and media apps. (e.g. Spotify, YouTube Music)

For More Information

- Check your vehicle Owner's Manual for additional instructions.
- Or, visit the Android Auto Help Center at https://support.google.com/androidauto/
- For full list of apps compatible with Android Auto, visit https://www.androidauto/auto/
- Google, Android, Google Play, Android Auto and other marks are trademarks of Google LLC.
- The Infotainment System only acts as an intermediary interface for accessing Android device functions.
- Features and behaviors are dependent on the Android device, the OS version, the app, and the media file played.
- When using Android Auto, please avoid distraction and use Android Auto responsibly. Stay fully aware of driving conditions and always obey applicable laws.

Android Auto is a service provided by Google LLC, bound by their terms and conditions. When using Android Auto, information will be sent from your vehicle (including its position) to the connected Android device. You will be solely responsible for anyone using the service on your vehicle. ◄


THIS PAGE IS INTENTIONALLY LEFT BLANK

Multimedia Unit (Type 2)


Overview of Multimedia Unit (Type 2)



MDU - RHD vehicle (Multimedia unit on left display screen)

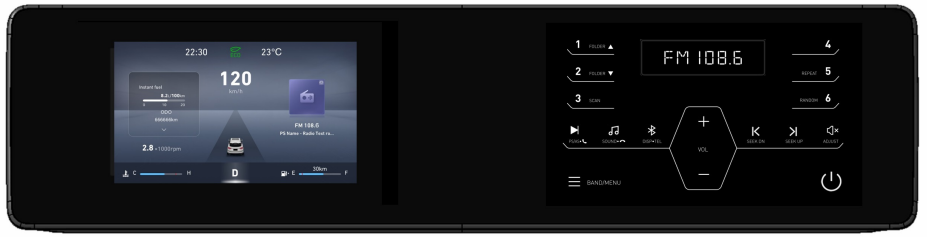


MDU - LHD vehicle (Multimedia unit on right display screen)

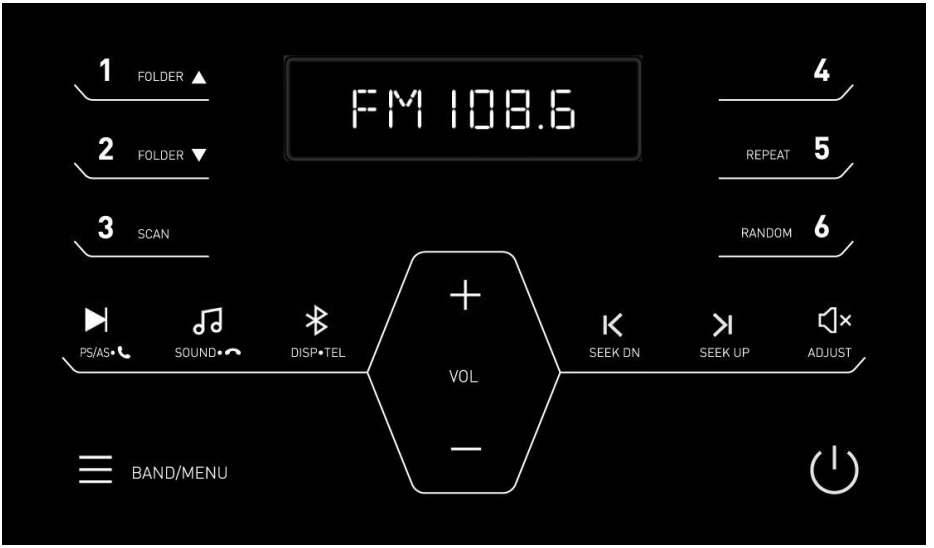


Multimedia Unit Type 2

Device and Operation

Steering Wheel Control Buttons

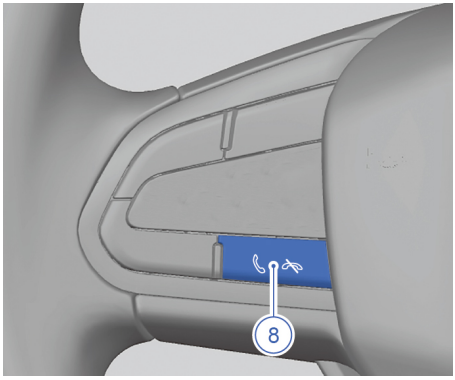

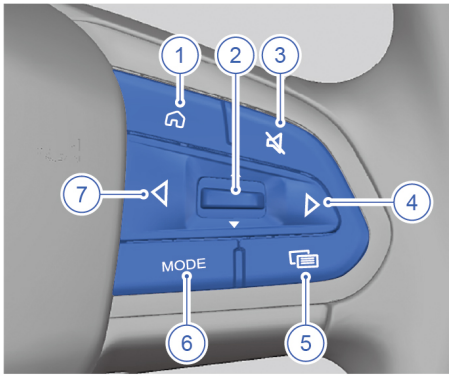


No.	Button Name	Short Press	Long Press
1	Home button	Press this button briefly to return to the previous menu or interface.	—
2	Selection and Confirmation button (volume up/down)	Move this button up or down to adjust (increase or decrease) the audio source volume from the multimedia unit.	Move this button up or down to continuously increase or decrease the audio source volume from multimedia unit.
3	Mute button	Short press to mute or unmute the audio source.	—
4	Right Selection button (Next)	To seek or switch to the : • Radio: next station • Music: next song	To seek next station and to fast forward the song.
5	Mode Switch button	To switch the control of the multi-control function buttons between the meter instrument and the multimedia unit (open or close the main menu of meter instrument).	
6	MODE button	To change between audio sources.	

No.	Button Name	Short Press	Long Press
7	Left Selection button (Previous)	To seek or switch to the : • Radio: previous station • Music: previous song	To seek previous station and to rewind the song.
8	Call button (phone)	Press this button briefly to : • Answer the Bluetooth phone. • Hang up during a call or cancel making a call.	Press and hold this button to : • Hang up during a call or cancel making a call. • Dial the last call when in idle.

Turning Off/On the System

Turning On

To turn on, tap the [⏻] button.

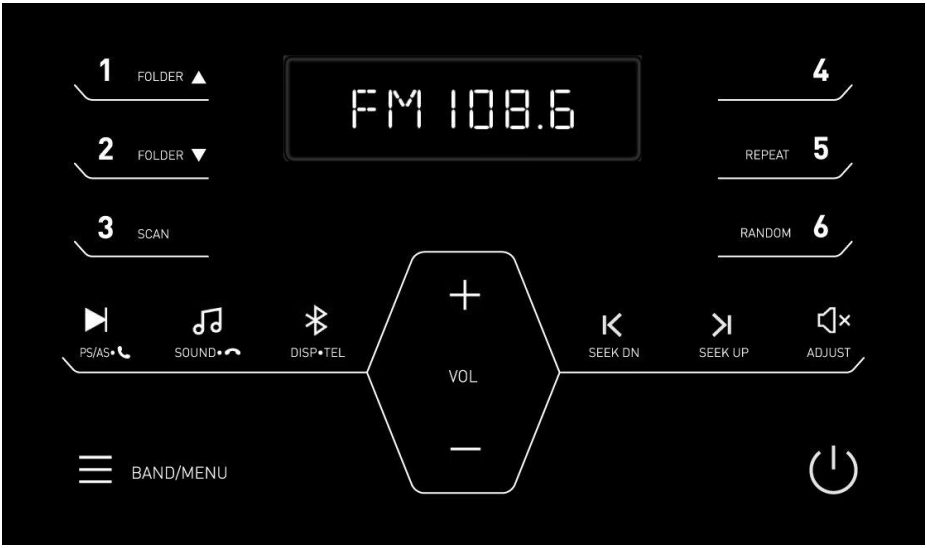

Turning Off


Long press the [⏻] button for more than 1 second to enter the screensaver or turn off the segmented screen display.

Vehicle Setting

Sound

Adjusting the Sound Equalizer

The user can adjust the sound equalizer according to their preference.

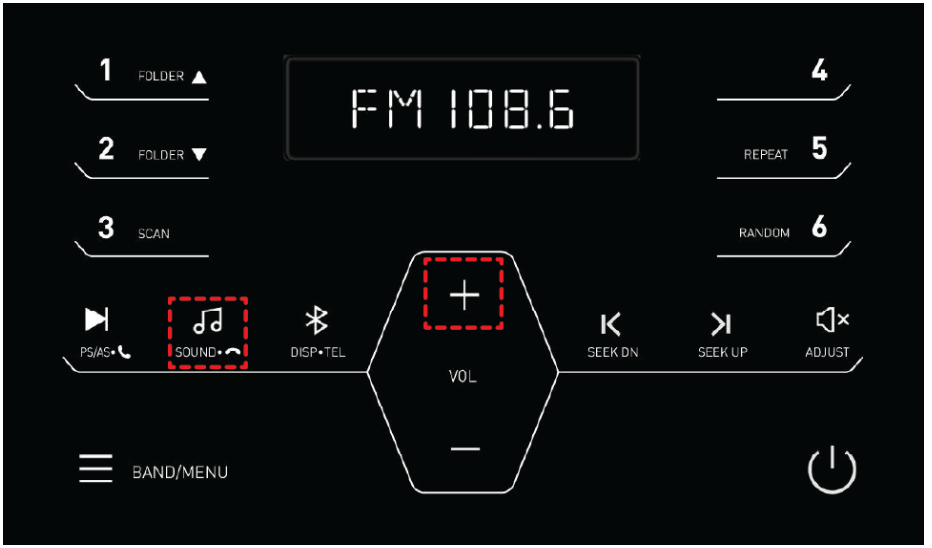


How to adjust the sound equalizer settings:

1. Press the [SOUND] button to enter the equalizer mode.
2. Press “+” to choose you preferred equalizer settings (“PROTON” → “CLASSIC → “JAZZ → “HIP HOP” → “ROCK → “POP”).
3. Tap “SOUND” button again to confirm.

Each audio equalizer mode is preset and its specific parameters cannot be adjusted. ◄

Multimedia Entertainment

Media Mode

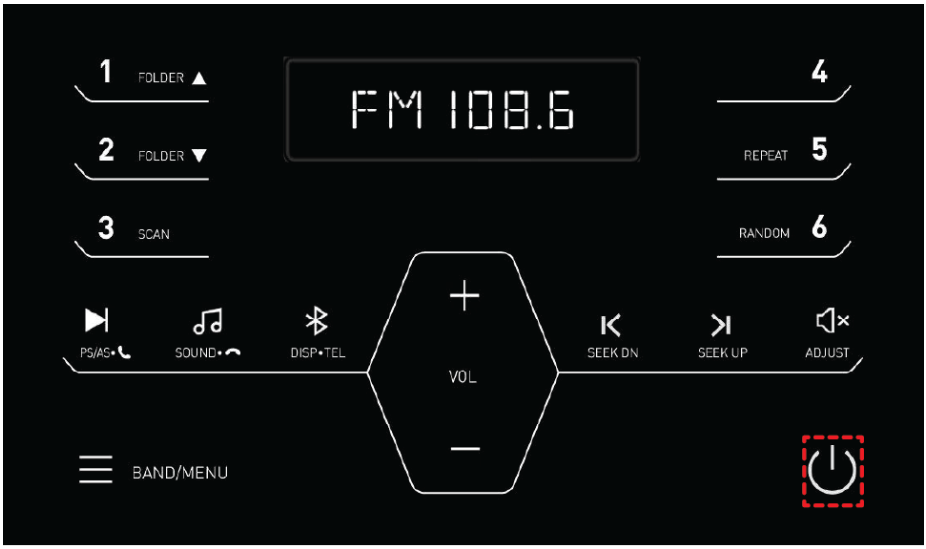


Touch area

Tap the [⏻] button to switch the media mode source in between Radio, Bluetooth, and USB.

Radio

Introduction to Radio Interface

The system supports AM and FM radio broadcasts.

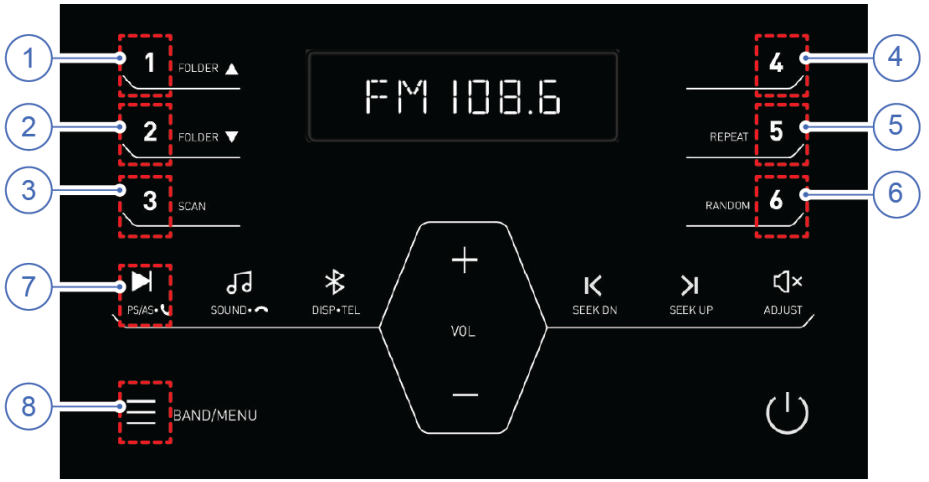

No.	Button Name	No.	Button Name
1	Preset 1	5	Preset 5
2	Preset 2	6	Preset 6
3	Preset 3	7	PS/AS button
4	Preset 4	8	Band/Menu

Turning ON the Radio

- Press the [⏻] button repeatedly until you find the Tuner mode to turn on the Radio mode.
- In FM mode, press the [PS/AS] button to initiate a scan for available radio stations. Upon completion of the scan, up to six stations will be automatically stored to Preset 1 through Preset 6.
- Press the [BAND] button and select one of the preset frequency bands such as FM1, FM2, FM3 or AM.
  FM1 → FM2 → FM3 → AM → FM1 ...
- Press the [⏮] / [⏭] button to tune in the desired station.

Automatic Search Tuning

- Press the [BAND] button and select the desired frequency band (FM or AM).

- Press and hold the [MENU] button for 1 second or longer to switch the DX/LOCAL search. "DX Mode/LO Mode" will appear on the display screen of the audio unit.

There are 2 types of tuning modes : DX SEEK and LOCAL SEEK.
DX SEEK can automatically tune in to receivable broadcast stations; LOCAL SEEK can only tune in to broadcast stations with good reception sensitivity. ◄

- Press and hold the [⏮] / [⏭] button for 1 second or longer to start automatic station tuning.
- When you press and hold the [⏭] button for 1 second or longer, the search will proceed toward higher frequency trends.
- When the press and hold the [⏮] button for 1 second or longer, the search will proceed toward lower frequency trends.

When seek tuning starts, "DX SEEK" will appear on the display of the audio unit. ◄

Local Search

- When you press the [⏭] button for 1 second or longer, the search will proceed to higher frequency trends.
- When you press and hold the [⏮] button for 1 second or longer, the search will trend toward lower frequencies. A broadcast station with good reception sensitivity will be selected.

When the local search starts, "LO SEEK" appears in the display. ◄

Manual Tuning

Press the [BAND] button to select the desired frequency band FM1, FM2, FM3 or AM.
Press the [⏮]/[⏭] button to manually tune in a radio station.

Preset Memory Function

The preset memory function can store up to 24 radio stations.
The FM1, FM2, FM3 and AM bands can store up to 6 radio stations each.

Manual Memory Function

- Press the [BAND] button, and then select the band to be stored in memory.
- Press the [⏮] / [⏭] button to tune to the desired station.
- Press and hold one of the PRESET buttons (1 ~ 6) for 1 second or longer to store the current station into the preset memory.

Automatic Storage (A-STORE)

- Press the [BAND] button and select the desired frequency band (FM or AM).
- Press and hold the [PS/AS] button for 1 second or longer. Radio stations with good reception are automatically stored in the preset channels. "A-STORE" will appear on the display screen of the audio unit.
- Automatic channel scanning will scan the entire frequency band once.
- If there is a frequency of radio station stored in the Preset before scanning, the scanned frequency band will overwrite the previous storage.

Automatic storage is performed on the current band according to its preset automatic scanning parameters.

The auto store function is used to store up to 6 radio stations that are automatically tuned in sequence. If the 6 receivable stations cannot be received, the previously stored station will remain in the memory location without being overwritten. ◄

Scheduled Scan

- Press the [PS/AS] button to activate the preset scan.
- When you tune to the desired station, press the [PS/AS] button again to continue receiving the station. "P-SCAN" and "SCN" indicator will appear on the display screen.
- Short press the [PS/AS] button or switch the signal source, then switch back to the radio function to stop scanning, and the frequency scanned at the moment of switching the signal source will be stored.

Radio stations will be stored in the preset memory in sequence. This function is useful when searching for a desired station in the memory. Be careful not to press and hold the [PS/AS] button for 1 second or longer, otherwise the automatic store function will be activated and the unit will start storing stations.◄

Recalling Preset Station

- Press the [BAND] button and select the desired frequency band (FM or AM).
- Press the corresponding PRESET button (1 ~ 6) to call up a stored radio station.

There are 24 preset locations (6 for FM1, 6 for FM2, 6 for FM3, 6 for AM) for storing various radio stations in memory. Pressing the corresponding PRESET button (1~6) automatically calls up the stored radio frequency. ◄

Bluetooth Music

Pairing with a Mobile Phone or Bluetooth Device

You can connect your audio unit via Bluetooth for seamless media access.
The supported audio formats include 3GP, FLV, MKV, WMV, MPG and MOV. There will be a file corruption report or the file cannot be recognized for other formats.

Connecting with Phone or external Bluetooth devices (A2DP support)

To connect the BT with mobile phone device, ensure the media mode is in Bluetooth mode.

- In Bluetooth settings, press SEEK DN or SEEK UP button to switch between “ADD DEVICE”, “DELETE DEVICE”, and “DISCONN DEVICE” modes.
- Press the [Power] button until the display shows “B/TOOTH AUDIO”.
- Tap and hold ADJUST button until the system enters the Bluetooth mode -> press SEEK DN or SEEK UP button and choose “ADD DEVICE”
- Tap PS/AS button to start pairing. The display will shows “PAIRING”.
- Turn on the Bluetooth function on your mobile phone, search for Bluetooth device with a name of “SAGA BLUETOOTH” and click to select it.

When the USB flash drive is re-inserted or the power is not turned off; and then the mode is switched and then re-entered into USB mode, the last playback position should be remembered and playback should resume automatically. ◄

For New Phone That Supports Secure Simple Pairing (SSP):

- A Bluetooth pairing request message with a random 6-digit passkey will be displayed on your mobile phone.
- Make sure the same code is also shown on “SAGA BLUETOOTH”.

For Feature Phones:

- Enter the defined PIN when prompted (default is " 0000 ").
- After pairing is successful, the system will automatically connect to the phone. The phone will prompt you to enter the key and PIN code.

Successful Connection

Once “**Connected**” status shown on your phone, this indicates that the Bluetooth connection is successful.

- Make sure your phone supports the hands-free profile.
- When using this vehicle’s hands-free mode, please make sure that the Bluetooth operation mode in your mobile phone is turned on.

- Any further connection attempts by other devices to connect as hands-free partners will be rejected until the current device is disconnected. Refer to your phone's user manual to disconnect devices.

Connecting to Previous Paired Mobile Phone or Bluetooth Device

When this audio unit is not connected to any Bluetooth device, you can connect to any previously paired Bluetooth device as follows:

1. Tap and hold ADJUST button until the system enters the Bluetooth settings > SEEK DN or SEEK UP button and choose “CONNECT DEVICE”.
2. Press SEEK DN or SEEK UP button to select the paired phone or device to connect to, and then press PS/AS button. The audio unit will attempt to establish a connection with the selected Bluetooth device.

When the connection is successful, the Bluetooth indicator will appear next to the Bluetooth device‘s name and “CONNECTED” will be displayed. ◄

Auto Connection

This audio unit will automatically connect to the last connected Bluetooth device when the vehicle’s ignition is ON.

Make sure the Bluetooth function of the mobile phone or Bluetooth device is turned on, within the Bluetooth detection range and no other Bluetooth device such as wireless headphones are connected during the automatic connection process. The connection initiated by the audio unit is hands-free only.

The audio streaming connection needs to be initiated by the Bluetooth audio device itself. Some Bluetooth audio device will connect to the audio stream when connected to hands-free.

Connecting to Other Bluetooth Device

In case you attempt to connect other Bluetooth device to this audio unit, the current connected paired device must be disconnected first. Otherwise, the connection will not be successful.

It is not recommended to connect two devices (mobile phone and external audio player) at the same time. ◄

Disconnecting from Paired Mobile Phone or Bluetooth Device

When this audio unit is connected to a Bluetooth device, you can disconnect from the Bluetooth device as follows:

1. Tap and hold ADJUST button until the system enters the Bluetooth settings > SEEK DN or SEEK UP button and choose “DISCONN DEVICE”.
2. While "DELETE DEVICE " is displayed, press the PS/AS button to enter the confirmation screen. The first line displays "DISCONN" and the second line displays "YES” or “NO”.
   - Press VOL [+] button to select “YES”. Then press PS/AS button to confirm the deletion. The first line displays "[Bluetooth device name]“ will be displayed and the second line displays "DISCONN”.
   - Press VOL [-] button to select “NO”. Then press PS/AS button to confirm the cancellation and return to previous screen.

After the disconnection is completed, the display will switch to Bluetooth settings. ◄

Deleting Paired Mobile Phone or Bluetooth Device

You can delete the paired Bluetooth devices as follows:

1. Tap Power button until the display shows “B/TOOTH AUDIO”.
2. Tap and hold ADJUST button until the system enters the Bluetooth mode -> press SEEK DN or SEEK UP button and choose “DELETE DEVICE”
3. Tap PS/AS button -> “DELETE ALL”
4. While "DELETE ALL " is displayed, press the PS/AS button to enter the confirmation screen. The first line displays "DEL ALL" and the second line displays "YES” or “NO”.
   - Press VOL [+] button to select “YES”. Then press PS/AS button to confirm the deletion. "DELETED" will be displayed.
   - Press VOL [-] button to select “NO”. Then press PS/AS button to confirm the cancellation and return to previous screen.

After the disconnection is completed, the display will switch to B/TOOTH (bluetooth) settings. ◄

Control Buttons for Bluetooth Music Playback

Playing or Pausing Bluetooth Music

- Press [⏯] button to pause current playing music track.
- Press [⏯]button again to resume current music track.

Displaying Selection

- Press [ᛒ] button to select the display type of Bluetooth music.
- Press [ᛒ] button again to select next display type of Bluetooth music.
  Song title → Artist name → Album name → Clock display → Song title ...

Each item in the title display will be displayed for 2 seconds, and then the relevant title information will be displayed. ◄

Select Next or Previous Track

- **Next Track:**
  Press the [⏭] button to move to the beginning of the next track.
  Each time you press the [⏭] button, playback will continue to the next track in the forward.
- **Previous Track:**
  Press the [⏮] button to move to the beginning of the previous track.
  Each time you press the [⏮] button, playback will continue in the reverse direction from the previous track.

Toggle Display While Bluetooth Music Playback

- Press the [DISP] button to select the display type of Bluetooth music.
- To select the next type, press the same button again.
- Main display (song title) → Artist name → Album name → Clock display → Main display...

Once selected, the current display will become the default display. When adjusting a function such as volume, the screen will switch to the display of that function after the adjustment is completed.

THIS PAGE IS INTENTIONALLY LEFT BLANK

USB Music

You can connect your multimedia unit via USB for seamless media access.
The supported audio formats include MP3/WMA/FLAC. There will be a file corruption report or the file cannot be recognized for other formats.


Entering USB Mode

Tap the Power button and select USB mode.

If no USB storage device is inserted, “NO MEDIA” will be displayed for selection.◄

USB Music Playback

You can play music directly from a USB flash drive using the built-in audio app.

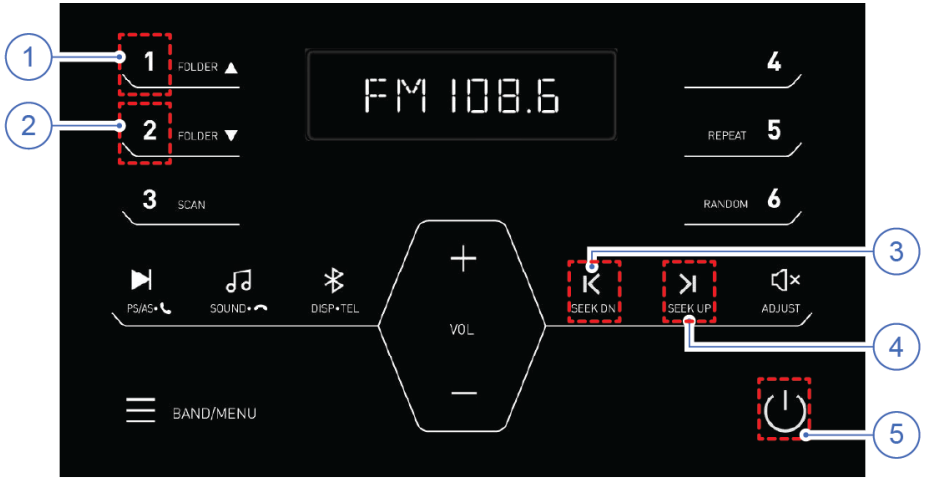

1. Folder Up button
2. Folder Down button
3. PREVIOUS button
4. NEXT button
5. POWER button

After inserting the USB flash drive, it is possible to read and play the music files in the USB flash drive.
While in USB mode, you can browse through folders on the USB drive by tapping the “FOLDER Up” or “FOLDER Down” buttons.

Selecting Track

To select the next or previous track, press the [⏮] or [⏭] buttons.


Next Song

Press SEEK UP button to move to the next track

Previous Song

Press [⏮] button to move to the beginning of the current track
Press [⏭] twice to move to the beginning of the previous track.

Playing and Pausing USB Music Playback

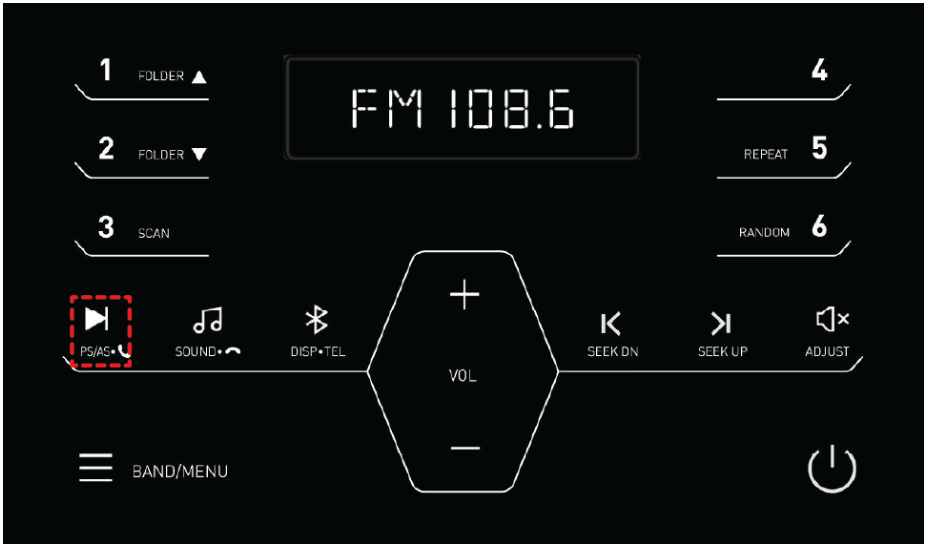

1. Press the [⏯] button to pause the USB music layback.The wording “PAUSE” will appear on the display.
2. To resume USB music playback, press [⏯] button again.

Toggle Display While USB Music Playback

Press the [DISP] button to select the USB display type. To select the next type, press the same button again.
Main display (File name) → Folder name → Title name → Artist name → Album name → Clock Display → Main Display...
The track, directory, track title, album name and creator name are called Title Display.

Each item in the title display will display " “FILE", "FOLDER", "TITLE", "ARTIST", or " ALBUM" for 2 seconds, and then display the relevant title information.
When the device is powered on and enters USB playback mode, the contents of the USB flash disk are read and " STORAGE READ " is displayed . After the reading is completed, the display interface is directly entered without displaying FILE. After that, press the [DISP] button to display the above table.
Depending on the file format in the USB flash drive, the reading time may vary from 1 second to more than ten seconds. ◄

Playing USB from the Beginning

Press the [BAND] button, and the USB will start playing the first track in the first folder of the USB flash disk from the beginning .

Other Various USB Playback Functions

Scan and Play

This function allows you to find and play the first 10 seconds of all tracks in all folders in the USB flash disk.

- Press the [SCAN] button to perform scan playback. The “SCN” indicator will appear on the display screen of the audio unit.
- Scan play starts from the next track after the currently playing track.
- After scanning all tracks in the current folder, scanning playback will continue to the next folder.

Scan and Play All Tracks

This function allows you to find and play the first 10 seconds of the first track of any folder on the USB flash disk.
Press [SCAN] button during scan playback to execute all scan playback. “ALL” and “SCN” indicators will light up on the display.

All scan playback will always start from the first track of the next folder. After the scan function completes one cycle, the scan will be canceled. ◄

Cancel Scan

Press [SCAN] button again during "All Scan" playback. “ALL” and “SCN” indicators will turn off.

Repeat

This function allows you to play the current track repeatedly.
Press the [REPEAT] button to perform repeat playback. The “RPT” indicator will appear on the display.

Repeat all tracks

This function allows you to play the current USB folder repeatedly.
[REPEAT] button during repeat playback to execute folder repeat playback. “ALL” and “RPT” indicators wil light up on the display.

Cancel Repeat

Press [REPEAT] button again during "All Repeat Play". “ALL” and “RPT” indicators will turn off.

Shuffle

This function allows you to play all tracks in the current folder in random order.
Press the [RANDOM] button to perform random play. The “RDM” indicator lights up on the display.

All Tracks Random

Plays all tracks in all folders in the USB in random order.
Press the [RANDOM] button during random play to execute all random plays. The “ALL” and “RDM” indicators will appear in the display.

Cancel Random

Press the [RANDOM] button again during All Random playback . The “ALL” and “RDM” indicators will turn off.

After canceling the scan play, the current track will be played normally and then jump to the next song in sequence. ◄

Phone

Bluetooth Phone Function


This multimedia unit is equipped with Bluetooth Phone function so that you can easily place or answer calls directly through the multimedia screen without reaching for your mobile phone.

Whenever your vehicle audio unit is turn on, the audio unit will be in standby mode, waiting for a call.

When a call comes in, the audio unit automatically mutes and the ring tone is reproduced through the vehicle's speakers.

The vehicle audio unit will temporarily switch to phone mode and the incoming caller ID will be displayed in the display area of the audio unit.

Before making a call, via audio unit, it is advised to connect the mobile phone via Bluetooth pairing. ◄

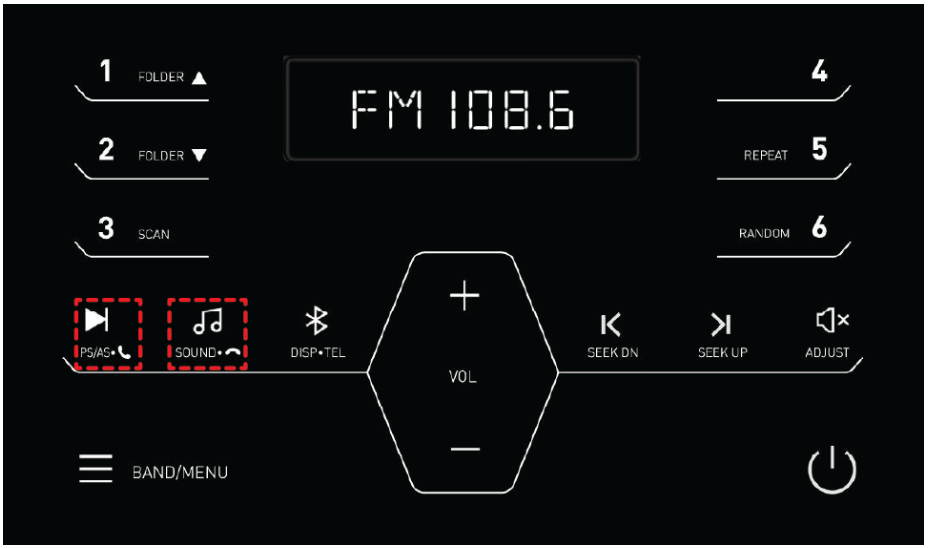

Answering a Call

Users can answer calls directly from the audio unit. Alternatively, you can answer the call using your phone's answer keypad.

While a Bluetooth call is in progress:

- Short press the [ ] button to answer an incoming call.
- During a call, the audio unit display switches to phone mode and the call duration is displayed on the display area of the audio unit.

Rejecting a Call

- Press the [ ] button to reject an incoming call through your vehicle audio unit.
- Alternatively, you can reject the call using your phone's keypad.

"CALL REJECTED" will be displayed shortly on the display screen of the audio unit before returning to the previous mode. ◄

Ending a Call

- Press the [ ] button to end a phone conversation through your vehicle audio unit.
- Alternatively, you can use your phone's keypad to end the call.

"CALL ENDED" will be displayed shortly on the display screen of the audio unit before returning to the previous mode. ◄

Making a Call (Redial)

- Press the [TEL] button to enter the phone menu mode.
- In phone menu mode, short press the [ ] or the [ ] button to switch between "REDIAL", "VOICE DIAL" and "DISCONN DEVICE" functions.
- After selected the "REDIAL" function, press the [ ] button to make a call to the latest dialed phone number.

After the call is successfully activated, " DIALING " will be displayed on the display screen of the audio unit.

Dialing Using Voice Dial

VOICEDIAL is an outgoing voice assistant function.

- Press the {TEL] button to enter the phone menu mode.
- After selected the “VOICE DIAL” function, press the [ ] button to activate the Voice Dial function.
- After the outgoing voice assistant is called, the code is disconnected and only the dialing is responded.
  The screen displays " dialing ".

If the dialing fails or the user does not dial , " call failed " will be displayed .
If the dialing is successful, " dialing + phone number " will be displayed .
After the call is connected, " mobile phone + TEL + phone number " will be displayed.

Cancelling a Call

- Press the [ ] button to cancel outgoing calls through your audio unit.
- "CALL ENDED" will be displayed on the display screen of the audio unit before returning to the previous mode.
- Alternatively, you can cancel the call using your phone's keypad.

SCAN QR CODE FOR MORE INFORMATION

PERUSAHAAN OTOMOBIL NASIONAL SDN. BHD. **(100995-U)**
HICOM Industrial Estate, Batu 3,
P.O Box 7100, 40918 Shah Alam,
Selangor Darul Ehsan, Malaysia.
Fax: +603 5191 1252

Language : ENGLISH
Market : MHR & GEX
Model : **All-New SAGA**
Published : **FEBRUARY 2026**
Published in : MALAYSIA

proton.com **PROTON Customer Care 1 800 888 398**

A Member of DRB-HICOM